

## Technical Information

# Prosonic M FMU40/41/42/43

## Ultrasonic Level Measurement

Compact transmitters for non-contact level measurement of fluids, pastes and coarse bulk materials



### Application

- Continuous, non-contact level measurement in fluids, pastes, sullages and coarse bulk materials
- Flow measurement in open channels and measuring weirs
- System integration via:
  - HART (standard), 4...20mA
  - PROFIBUS PA
  - Foundation Fieldbus
- Maximum measuring range:
  - FMU 40:
    - 5 m in fluids
    - 2 m in bulk materials
  - FMU 41:
    - 8 m in fluids
    - 3,5 m in bulk materials
  - FMU 42:
    - 10 m in fluids
    - 5 m in bulk materials
  - FMU 43:
    - 15 m in fluids
    - 7 m in bulk materials

### Features and benefits

- Quick and simple commissioning via menu-guided on-site operation with four-line plain text display
- Envelope curves on the on-site display for simple diagnosis
- Easy remote operation, diagnosis and measuring point documentation with the supplied ToF Tool operating program.
- Suitable for explosion hazardous areas (Gas-Ex, Dust-Ex)
- Linearisation function (up to 32 points) for conversion of the measured value into any unit of length, volume or flow rate
- Non-contact measurement method minimizes service requirements
- optional remote display and operation (up to 20 m from transmitter)
- Installation possible from thread G 1½" or 1½ NPT upwards
- Integrated temperature sensor for automatic correction of the temperature dependent sound velocity


# Inhaltsverzeichnis

<b>Function and system design</b> .....	<b>3</b>
Measuring principle .....	3
Equipment architecture .....	4
<b>Input</b> .....	<b>8</b>
Measured variable .....	8
Measuring range .....	8
Operating frequency .....	9
<b>Output</b> .....	<b>10</b>
Output signal .....	10
Signal on alarm .....	10
Load HART .....	10
Output damping .....	10
Linearisation .....	10
<b>Auxiliary energy</b> .....	<b>11</b>
Terminal compartment .....	11
Terminal assignment .....	11
Fieldbus plug connectors .....	12
Supply voltage .....	13
Cable entry .....	13
Power consumption .....	13
Current consumption (2-wire-instruments) .....	13
HART ripple .....	14
Max. noise HART .....	14
Galvanic isolation .....	14
<b>Performance characteristics</b> .....	<b>15</b>
Reaction time .....	15
Reference operating conditions .....	15
Measured value resolution .....	15
Pulse frequency .....	15
Measuring error .....	15
<b>Installation conditions</b> .....	<b>16</b>
Installation variants FMU 40, FMU 41 .....	16
Installation variants FMU 42 .....	16
Installation variants FMU 43 .....	17
Installation conditions for level measurements .....	17
Installation in narrow shafts .....	18
Installation conditions for flow measurements .....	18
Blocking distance, nozzle installation .....	20
<b>Ambient conditions</b> .....	<b>21</b>
Ambient temperature .....	21
Storage temperature .....	21
Resistance to alternating temperature cycles .....	21
Climate class .....	21
Ingress protection .....	21
Vibration resistance .....	21
Electromagnetic compatibility (EMC) .....	21

<b>Process conditions</b> .....	<b>21</b>
Process temperature .....	21
Process pressure .....	21
<b>Mechanical construction</b> .....	<b>22</b>
Design / dimensions .....	22
Weight .....	23
Housing design .....	23
Process connection, sealing material, sensor material .....	23
<b>Human interface</b> .....	<b>24</b>
Display and operating elements .....	24
On-site operation .....	25
Remote operation .....	26
<b>Certificates and Approvals</b> .....	<b>28</b>
CE mark .....	28
Ex-Zulassung .....	28
External standards and guidelines .....	28
<b>Ordering information</b> .....	<b>29</b>
Product structure FMU 40 .....	29
Product structure FMU 41 .....	30
Product structure FMU 42 .....	31
Product structure FMU 43 .....	32
Scope of delivery .....	32
<b>Accessories</b> .....	<b>33</b>
Weather protection cover .....	33
Installation bracket for FMU 40/41 .....	33
Adapter flange for FMU 40 / FMU 41 .....	34
Cantilever .....	35
Mounting Frame .....	36
Wall Bracket .....	36
Commubox FXA191 .....	36
Service Interface FXA193 .....	37
Remote display FHX40 .....	38
<b>Supplementary documentation</b> .....	<b>39</b>
System Information .....	39
Operating manual .....	39
Description of device functions .....	39
Short instructions .....	39
Safety Instructions .....	39
Control drawings Installation drawings .....	41

## Function and system design

### Measuring principle

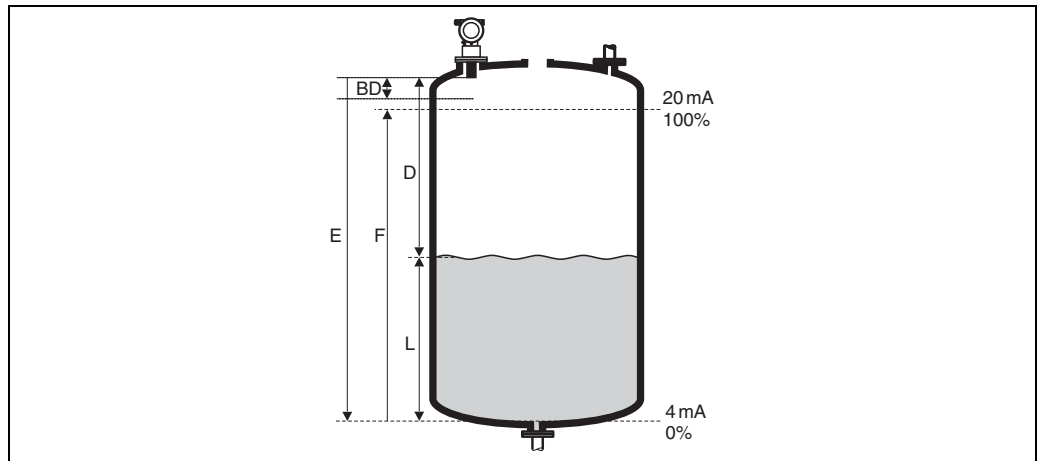

**E:** Empty distance; **F:** Span (full distance); **D:** Distance from sensor membrane – product surface; **L:** Level; **BD:** Blocking distance

Sensor	BD	Max. range fluids	Max. range bulk materials
FMU 40	0.25 m	5 m	2 m
FMU 41	0.35 m	8 m	3.5 m
FMU 42	0.4 m	10 m	5 m
FMU 43	0.6 m	15 m	7 m

### Time-of-flight method

The sensor of the Prosonic M transmits ultrasonic pulses in the direction of the product surface. There, they are reflected back and received by the sensor. The Prosonic M measures the time  $t$  between pulse transmission and reception. The instrument uses the time  $t$  (and the velocity of sound  $c$ ) to calculate the distance  $D$  between the sensor membrane and the product surface:

$$D = c \cdot t / 2$$

As the device knows the empty distance  $E$  from a user entry, it can calculate the level as follows:

$$L = E - D$$

An integrated temperature sensor compensates for changes in the velocity of sound caused by temperature changes.

### Interference echo suppression

The interference echo suppression feature on the Prosonic M ensures that interference echos (e.g. from edges, welded joints and installations) are not interpreted as a level echo.

### Calibration

Enter the empty distance  $E$  and the span  $F$  to calibrate the device.


### Blocking distance

Span  $F$  may not extend into the blocking distance  $BD$ . Level echos from the blocking distance cannot be evaluated due to the transient characteristics of the sensor.

## Equipment architecture

## 4...20 mA output with HART protocol

The complete measuring system consists of:

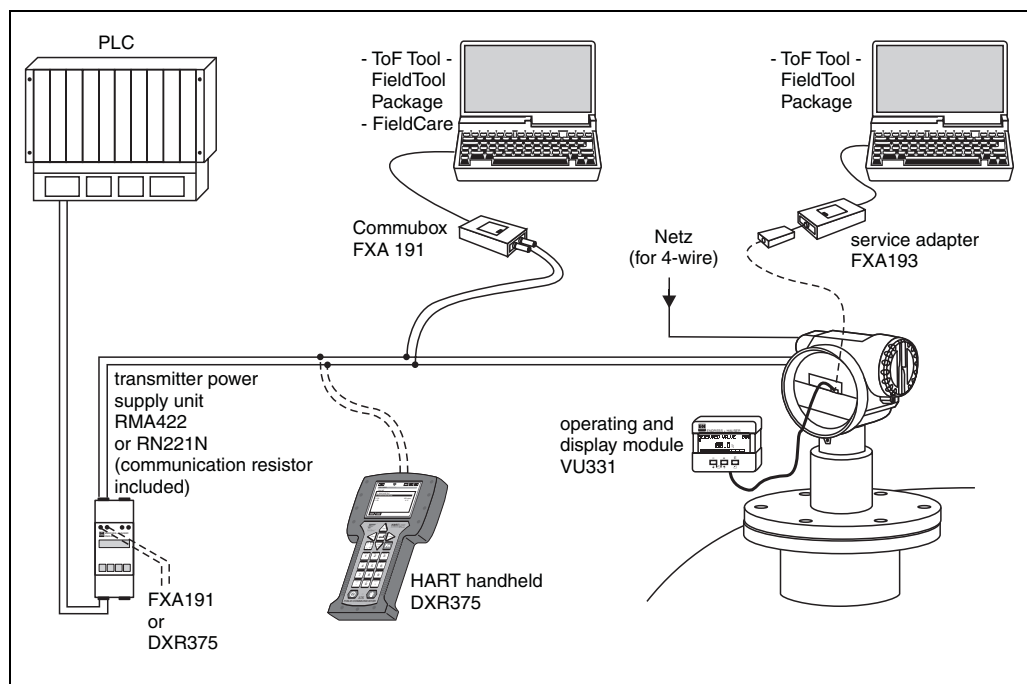

100-FMxxxxxx-14-00-06-en-007

If the HART communication resistor is not built into the supply unit, it is necessary to insert a communication resistor of 250  $\Omega$  into the 2-wire line.

## On-site operation


- with display and operating module VU 331
- with a Personal Computer, FXA 193 and the operating software ToF Tool

## Remote operation

- with HART handheld terminal DXR 375
- with a Personal Computer, Commubox FXA 191 and the operating software COMMUWIN II respectively ToF Tool.


### System integration using PROFIBUS PA

A maximum of 32 transmitters (8 if mounted in an explosion hazardous location EEx ia IIC according to FISCO-model) can be connected to the bus. The segment coupler provides the operating voltage to the bus. Both on-site as well as remote operation are possible.

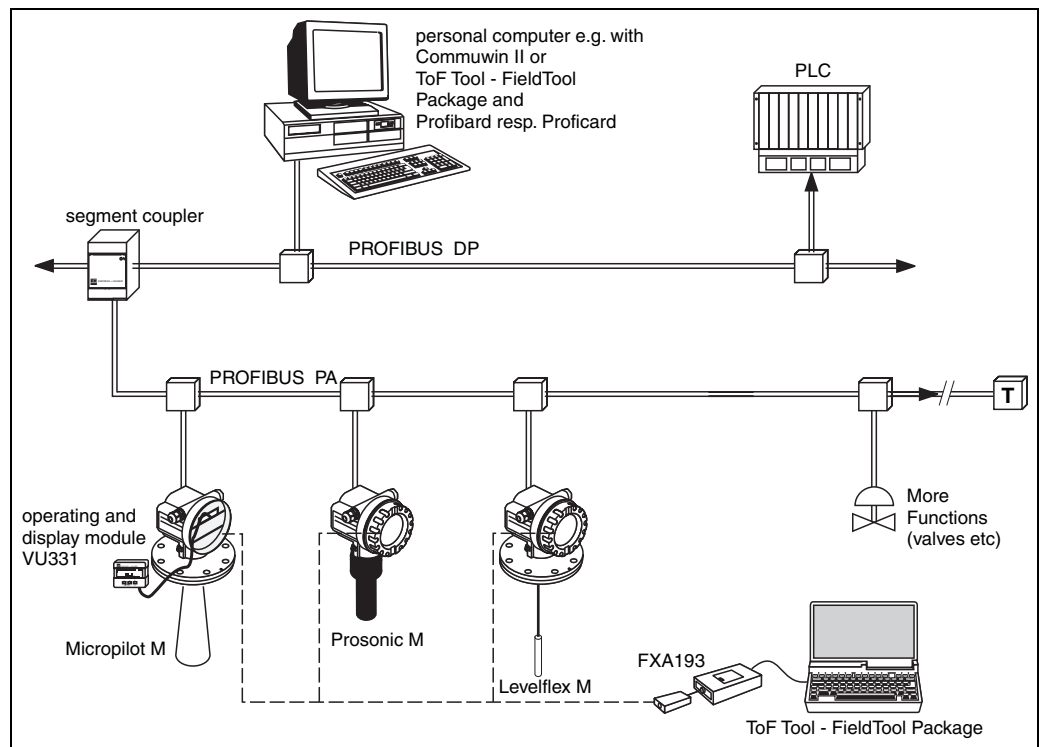


### System integration using Foundation Fieldbus (FF)

A maximum of 32 transmitters (standard or EEx d) can be connected to the bus. For protection class EEx ia: the maximum number of transmitters depends on the established rules and standards for intrinsically safe circuits (EN 60070-14) and proof of intrinsic safety. Both on-site and remote operation are possible.

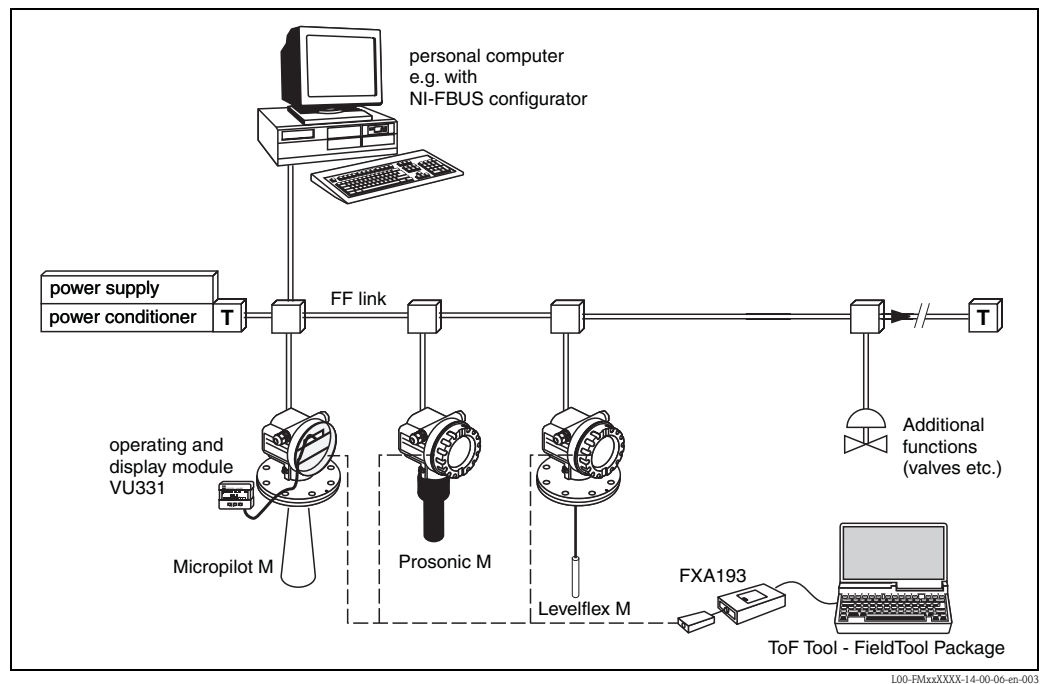

### System integration using Endress+Hauser Rackbus

You can interconnect a maximum of 64 devices with HART protocol to a Rackbus. Use an FXN 672 interface module for each device. You can integrate this bus into a higher-level bus by using a ZA gateway. Gateways are available for MODBUS, FIP, PROFIBUS, INTERBUS etc. Both on-site and remote operation are possible.

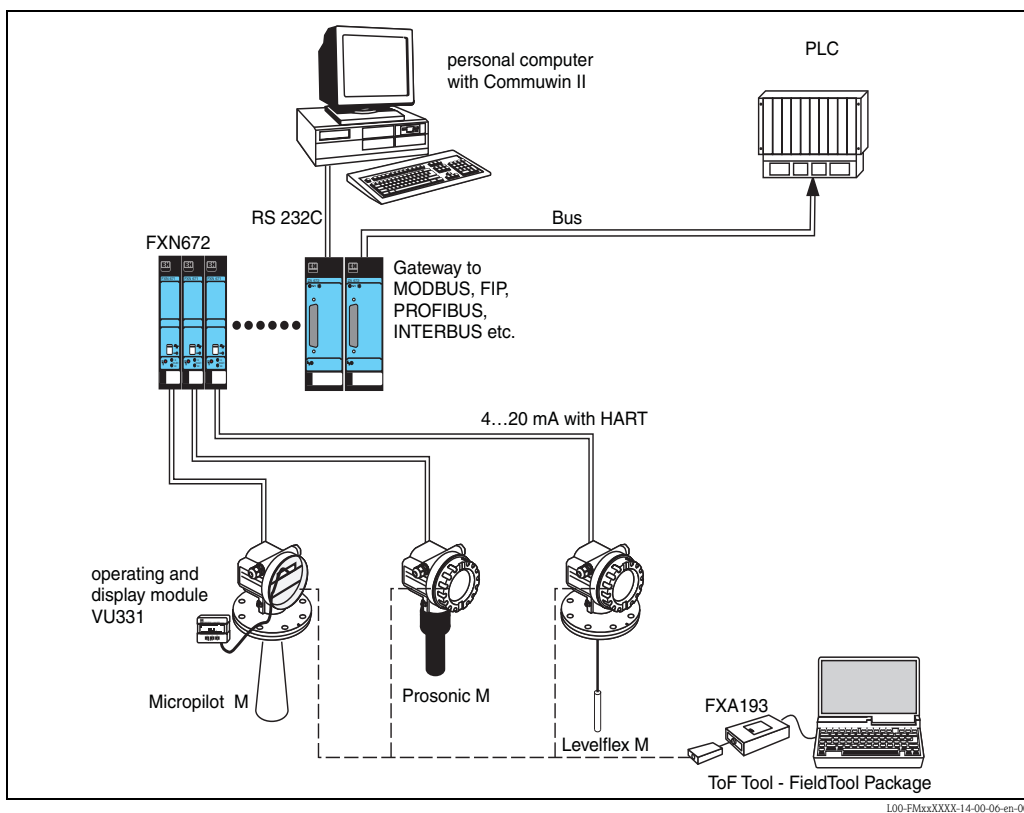


## System integration via Fieldgate

### Vendor Managed Inventory

By using Fieldgates to interrogate tank or silo levels remotely, suppliers of raw materials can provide their regular customers with information about the current supplies at any time and, for example, account for them in their own production planning. For their part, the Fieldgates monitor the configured level limits and, if required, automatically activate the next supply. The spectrum of options here ranges from a simple purchasing requisition via e-mail through to fully automatic order administration by coupling XML data into the planning systems on both sides.

### Remote maintenance of measuring equipment

Fieldgates not only transfer the current measured values, they also alert the responsible standby personnel, if required, via e-mail or SMS. In the event of an alarm or also when performing routine checks, service technicians can diagnose and configure connected HART devices remotely. All that is required for this is the corresponding HART operating software (e.g. ToF Tool – FieldTool Package, FieldCare, ...) for the connected device. Fieldgate passes on the information transparently, so that all options for the respective operating software are available remotely. Some on-site service operations can be avoided by using remote diagnosis and remote configuration and all others can at least be better planned and prepared.

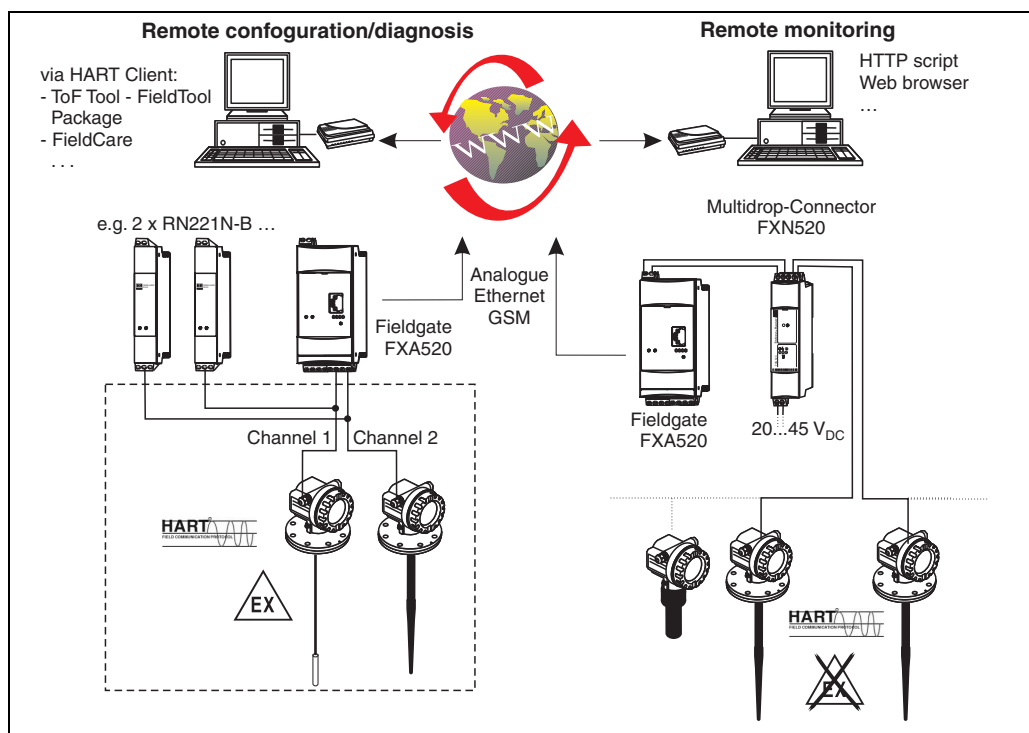

L00-FXA520xx-14-00-06-en-009



### Note!

The number of instruments which can be connected in multidrop mode can be calculated by the "FieldNetCalc" program which is available from your Endress+Hauser sales organisation. A description of this program can be found in Technical Information TI 400F (Multidrop Connector FXN520).

## Input

### Measured variable

The distance D between the sensor membrane and the product surface is measured.

Using the linearisation function, the device uses D to calculate:

- level L in any units
- volume V in any units
- flow Q across measuring weirs or open channels in any units

### Measuring range

The measuring range is limited by the range of a sensor. The sensor range is, in turn, dependent on the operating conditions. To estimate the actual range, proceed as follows (see also the calculation example in the diagram):

1. Determine which of the influences shown in the following table are appropriate for your process.
2. Add the corresponding attenuation values.
3. From the total attenuation, use the diagram to calculate the range.

Fluid surface	Attenuation
Calm	0 dB
Waves	5 ... 10 dB
Strong turbulence (e.g. stirrers)	10 ... 20 dB
Foaming	Ask Endress+Hauser


Bulk material surface	Attenuation
Hard, rough (e.g. rubble)	40 dB
Soft (e.g. peat, dust-covered clinker)	40 ... 60 dB

Dust	Attenuation
No dust formation	0 dB
Little dust formation	5 dB
Heavy dust formation	5 ... 20 dB

Filling curtain in detection range	Attenuation
None	0 dB
Small quantities	5 ... 10 dB
Large quantities	10 ... 40 dB

Temperature difference between sensor and product surface	Attenuation
to 20 °C	0 dB
to 40 °C	5 ... 10 dB
to 80 °C	10 ... 20 dB



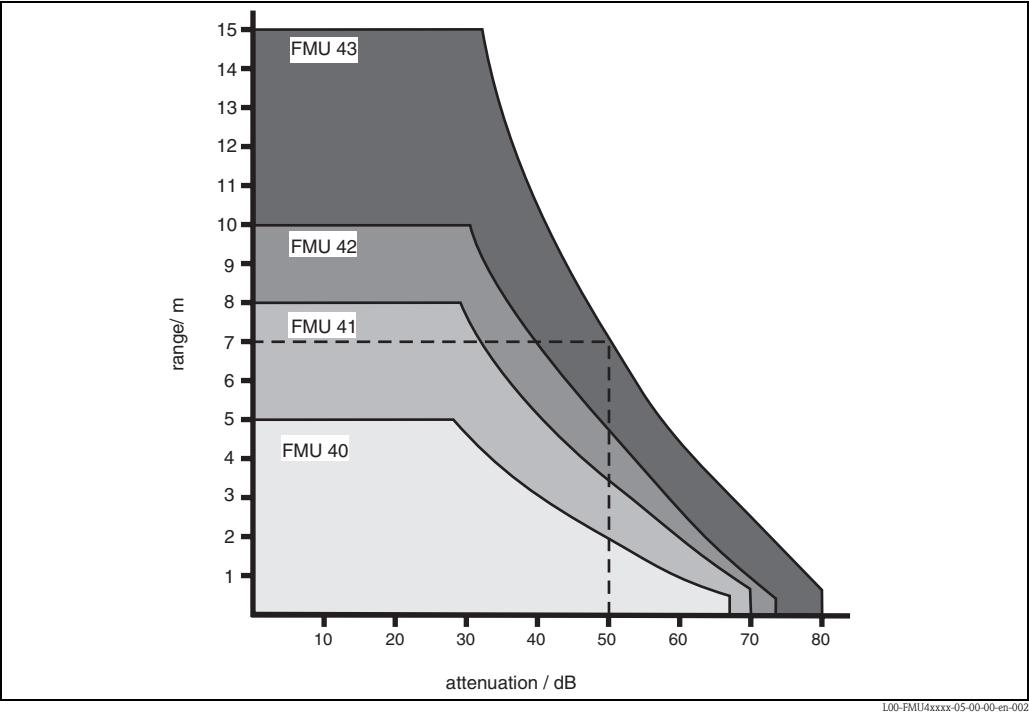

**Example (for FMU 43)**

For typical solid applications, a certain amount of dust coverage is normally present. Therefore, the following range results from the table and the diagram

■ Dust-covered rubble	approx. 50 dB	
■ no dust formation	0 dB	
■ No filling curtain in detection range	0 dB	
■ Temperature diff. < 20°C	0 dB	
	approx. 50 dB	=> range approx. 7 m

These measuring conditions have been taken into account during the calculation of the maximum measuring range in solid applications.

**Operating frequency**

Sensor	Operating frequency
FMU 40	approx. 70 kHz
FMU 41	approx. 50 kHz
FMU 42	approx. 42 kHz
FMU 43	approx. 35 kHz


## Output

<b>Output signal</b>	according to the instrument version ordered: <ul style="list-style-type: none"> <li>■ 4...20 mA with HART protocol</li> <li>■ PROFIBUS PA</li> <li>■ Foundation Fieldbus (FF)</li> </ul>
<b>Signal on alarm</b>	Error information can be accessed via the following interfaces: <ul style="list-style-type: none"> <li>■ On-site display (error symbol, error code and plain text description)</li> <li>■ Current output (error current configurable)</li> <li>■ Digital interface</li> </ul>
<b>Load HART</b>	Minimum load for HART communication: 250 $\Omega$
<b>Output damping</b>	Freely selectable, 0 ... 255 s
<b>Linearisation</b>	<p>The linearisation function of the Prosonic M allows conversion of the measured value into any unit of length or volume. In open channels or measuring weirs, also a flow linearisation is possible (calculation of the flow from the measured level). The linearisation table for calculating the volume in an horizontal cylindrical tank is preprogrammed. You can also enter any number of other tables containing up to 32 value pairs either manually or semi-automatically (by filling the vessel under controlled conditions).</p> <p>The supplied ToF Tool operating program can automatically calculate the table for any tank, weir or flume and upload it into the device.</p> <p>Flow curves for open channels can be calculated and entered into the instrument by the ToT Tool as well.</p>

## Auxiliary energy

### Terminal compartment


In the F12 housing, the terminals are located underneath the housing cover. In the T12 housing, they are under the cover of the separate terminal compartment.

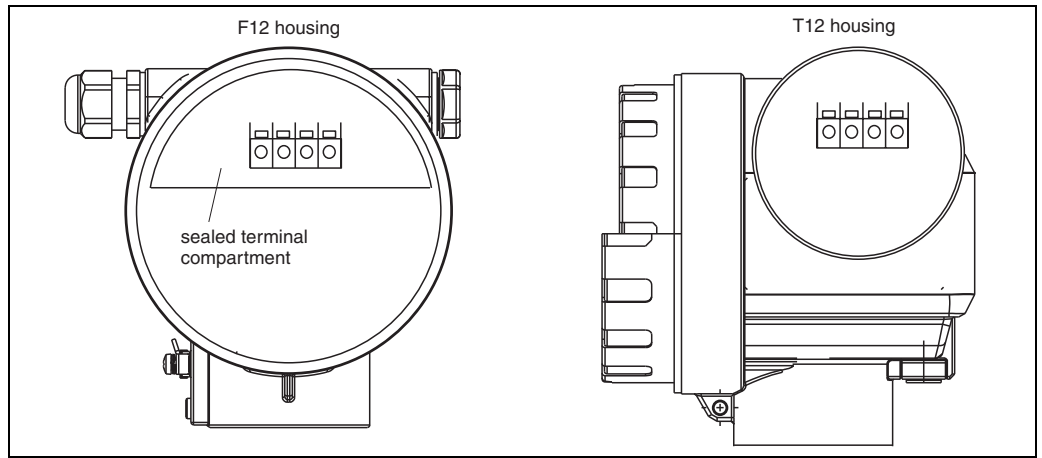

L00-FMR2xxxx-04-00-00-en-001


### Terminal assignment

#### 4 ... 20 mA with HART, 2-wire

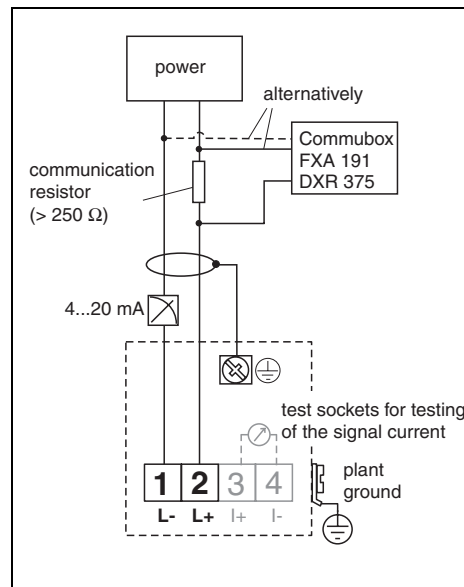


L00-FMxxxxxx-04-00-00-en-015

#### 4 ... 20 mA active with HART, 4-wire

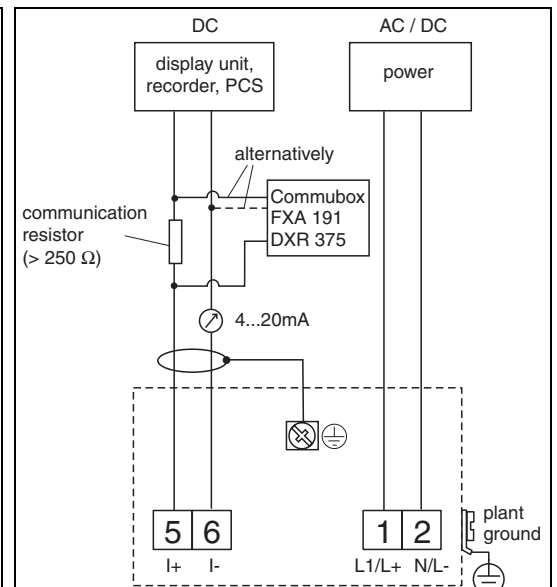


L00-FMxxxxxx-04-00-00-en-011

- Connect the connecting line to the screw terminals (line cross-sections of 0.5 ... 2.5mm) in the terminal compartment.
- Use 2-wire twisted pair cable with screen for the connection.
- Protective circuitry against reverse polarity, RFI and over-voltage peaks is built into the device (see also Technical Information TI 241F/00/en "EMC Test Procedures")

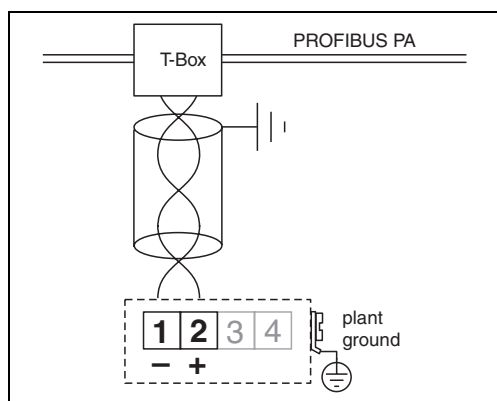**PROFIBUS PA**

L00-FMxxxxxx-04-00-00-en-012

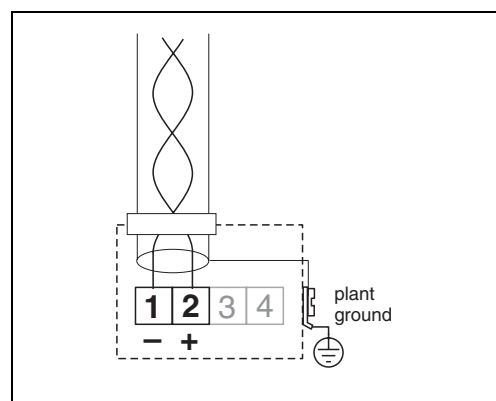**Foundation Fieldbus**

L00-FMxxxxxx-04-00-00-en-013

The digital communication signal is transmitted to the bus via a 2-wire connection. The bus also provides the auxiliary energy. Use 2-wire twisted pair cable with screen.

Refer to the following operating manuals for information on cable types, and how to set up and ground the network:

- BA 198F/00/de „PROFIBIS -DP/-PA, Guidelines for planning and commissioning“
- BA 013S/04/en „Foundation Fieldbus, Installation and Commissioning Guidelines“

**Fieldbus plug connectors**

For the versions with fieldbus plug connector (M12 or 7/8"), the signal line can be connected without opening the housing.

**Pin assignment of the M12 plug connector (PROFIBUS PA plug)**

	Pin	Meaning
	1	Ground
	2	Signal +
	3	Signal -
	4	not connected

L00-FMxxxxxx-04-00-00-yy-016

**Pin assignment of the 7/8" plug connector (FOUNDATION Fieldbus plug)**

	Pin	Meaning
	1	Signal -
	2	Signal +
	3	not connected
	4	ground

L00-FMxxxxxx-04-00-00-yy-017

**Supply voltage****HART, 2-wire**

The following values are the voltages across the terminals directly at the instrument:

Version		Current consumption	Terminal voltage minimum	Terminal voltage maximum
2-wire HART	Standard	4 mA	14 V	36 V
		20 mA	8 V	36 V
	EEx ia	4 mA	14 V	30 V
		20 mA	8 V	30 V
	EEx d	4 mA	14 V	30 V
		20 mA	11 V	30 V
Fixed current, adjustable, e.g. for solar power operation (measured value via HART)	Standard	11 mA	10 V	36 V
	EEx ia	11 mA	10 V	30 V
Fixed current for HART multidrop mode	Standard	4 mA <sup>1</sup>	14 V	36 V
	EEx ia	4 mA <sup>1</sup>	14 V	30 V

1) Start-up current 11 mA

**HART, 4-wire, active**

Version	Voltage	max. load
DC	10,5 ... 32 V	600 Ω
AC 50/60 Hz	90 ... 253 V	600 Ω

**Cable entry**

- Cable gland: M20x1.5 (recommended cable diameter 6 ... 10 mm)
- Cable entry G ½ or ½ NPT
- PROFIBUS-PA M12 plug
- Fieldbus Foundation 7/8" plug

**Power consumption**

Version	Power consumption
2-wire	51 mW ... 800 mW
4-wire AC	max. 4VA
4-wire DC; FMU 40/41	330 mW ... 830 mW
4-wire DC; FMU 42/43	600 mW ... 1 W

**Current consumption (2-wire-instruments)**

Communication	Current consumption
HART	3,6 ... 22 mA
PROFIBUS PA	max. 13 mA
Foundation Fieldbus	max. 15 mA

<b>HART ripple</b>	47...125 Hz: $V_{pp} = 200 \text{ mV}$ (measured at $500 \Omega$ )
<b>Max. noise HART</b>	500 Hz...10 kHz: $V_{rms} = 2.2 \text{ mV}$ (measured at $500 \Omega$ )
<b>Galvanic isolation</b>	With 4-wire devices, the evaluation electronics and mains voltage are galvanically isolated from each other.

## Performance characteristics

**Reaction time** The reaction time depends on the parameter settings (min. 0.5s for 4-wire devices, min. 2s for 2-wire devices).

**Reference operating conditions**

- Temperature = +20 °C
- Pressure = 1013 mbar abs.
- Humidity = 50 %
- Ideal reflective surface (e.g. calm, smooth fluid surface)
- No interference reflections within signal beam
- Set application parameters:
  - Tank shape = flat ceiling
  - Medium property = liquid
  - process conditions = calm surface

**Measured value resolution**

Sensor	Measured value resolution
FMU 40	1 mm
FMU 41	1 mm
FMU 42	2 mm
FMU 43	2 mm

**Pulse frequency**

- 2-wire devices: max. 0.5Hz
- 4-wire devices: max. 2Hz

The exact values are dependent on the type of device and the parameter settings.


**Measuring error** Typical specifications for reference operating conditions (include linearity, repeatability, and hysteresis):

Sensor	Measuring error
FMU 40	$\pm 2\text{ mm}$ or 0.2% of set measuring distance (empty calibration) <sup>1</sup>
FMU 41	$\pm 2\text{ mm}$ or 0,2% of set measuring distance (empty calibration) <sup>1</sup>
FMU 42	$\pm 4\text{ mm}$ or 0,2% of set measuring distance (empty calibration) <sup>1</sup>
FMU 43	$\pm 4\text{ mm}$ or 0,2% of set measuring distance (empty calibration) <sup>1</sup>

<sup>1</sup>whichever is greater


## Installation conditions

### Installation variants FMU 40, FMU 41

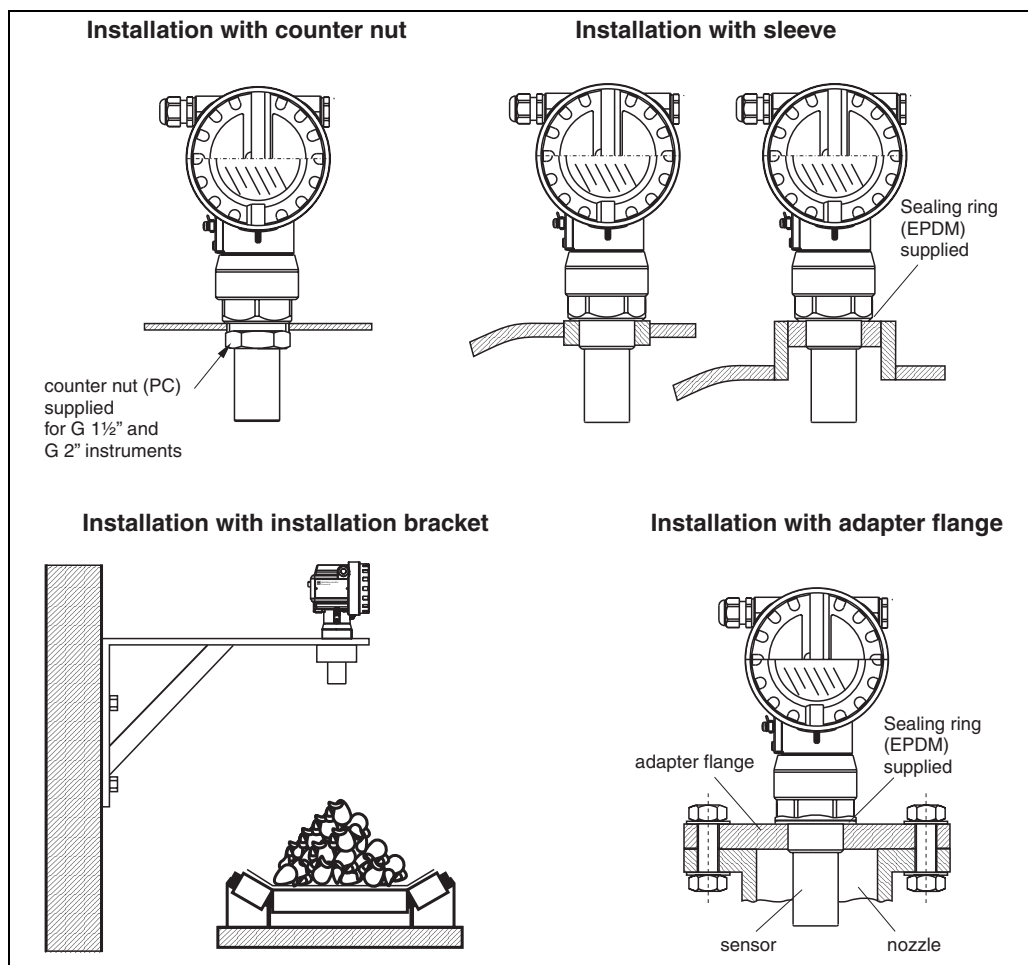


For installation bracket or adapter flange s. chapter "Accessories".

### Installation variants FMU 42

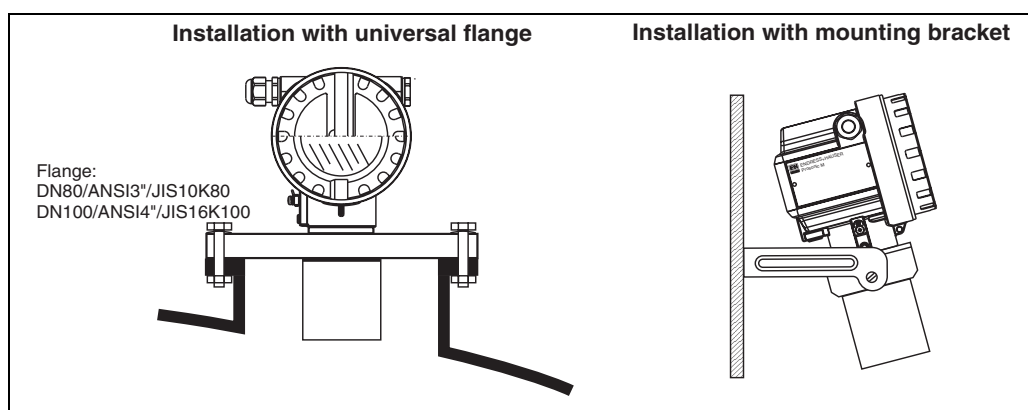




## Installation variants FMU 43

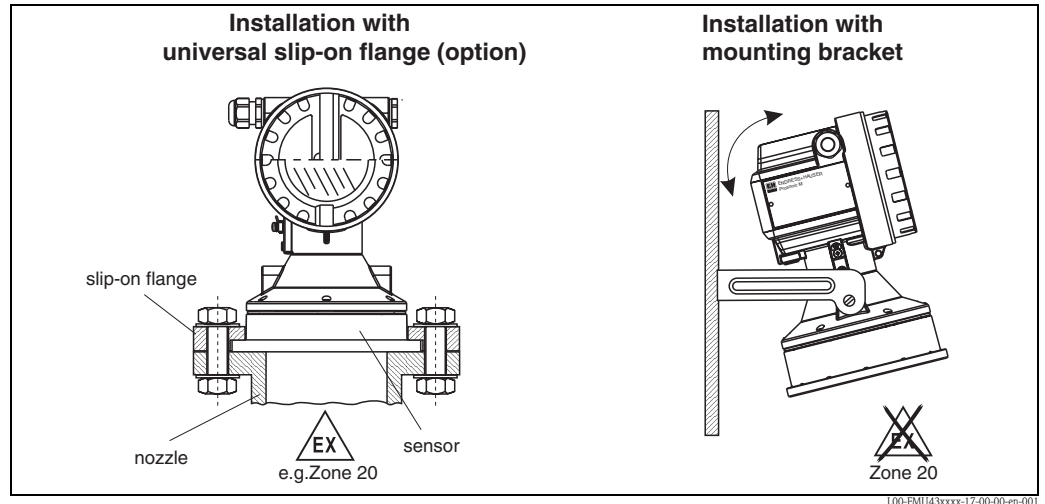

## Installation conditions for level measurements

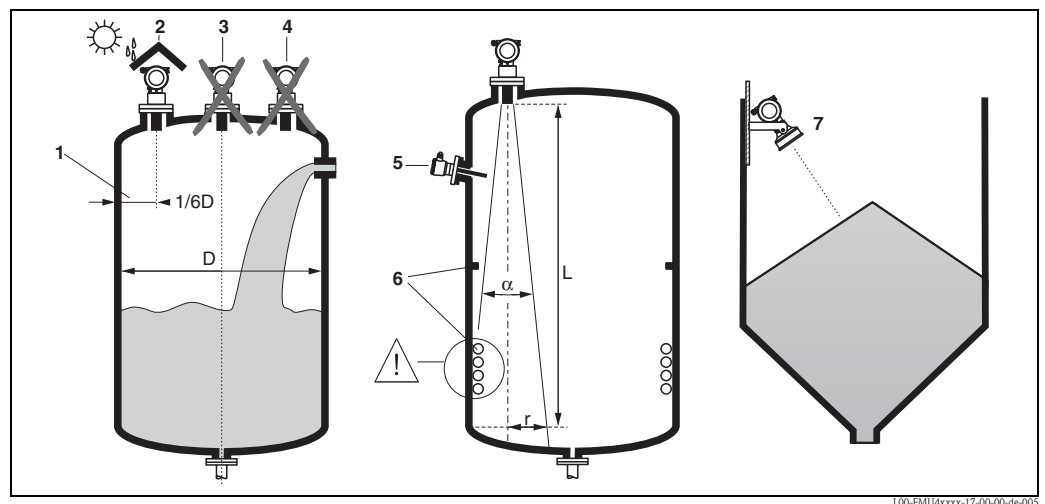


- Do not install the sensor in the middle of the tank (3). We recommend leaving a distance between the sensor and the tank wall (1) measuring  $1/6$  of the tank diameter.
- Use a protective cover, in order to protect the device from direct sun or rain (2).
- Avoid measurements through the filling curtain (4).
- Make sure that equipment (5) such as limit switches, temperature sensors, etc. are not located within the emitting angle  $\alpha$ . In particular, symmetrical equipment (6) such as heating coils, baffles etc. can influence measurement.
- Align the sensor so that it is vertical to the product surface (7).
- Never install two ultrasonic measuring devices in a tank, as the two signals may affect each other.
- To estimate the detection range, use the 3 dB emitting angle  $\alpha$ .

Sensor	$\alpha$	$L_{\max}$	$r_{\max}$
FMU 40	$11^\circ$	5 m	0,48 m
FMU 41	$11^\circ$	8 m	0,77 m
FMU 42	$11^\circ$	10 m	0,96 m
FMU 43	$6^\circ$	15 m	0,79 m

### Installation in narrow shafts

In narrow shafts with strong interference echoes, we recommend using an ultrasound guide pipe (e.g. PE or PVC wastewater pipe) with a minimum diameter of 100 mm.

Make sure that the pipe is not soiled by accumulated dirt. If necessary, clean the pipe at regular intervals.

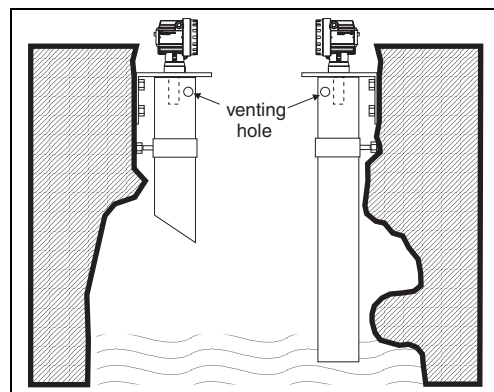


L00-FMU4xxxx-17-00-00-en-010

### Installation conditions for flow measurements


- Install the Prosonic M at the inflow side, as close above the maximum water level  $H_{\max}$  as possible (take into account the blocking distance BD).
- Position the Prosonic M in the middle of the channel or weir.
- Align the sensor membrane parallel to the water surface.
- Keep to the installation distance of the channel or weir.
- You can enter the "Flow to Level" linearisation curve ("Q/h curve") using ToF Tool or manually via the on-site display.

### Example: Khafagi-Venturi flume

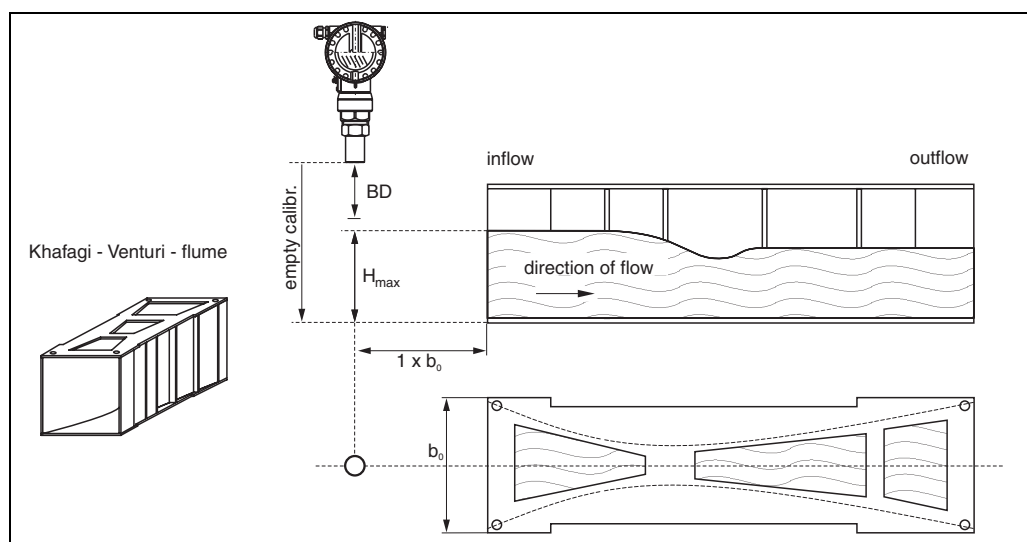

L00-FMU4xxxx-17-00-00-en-003


Example: Triangular weir

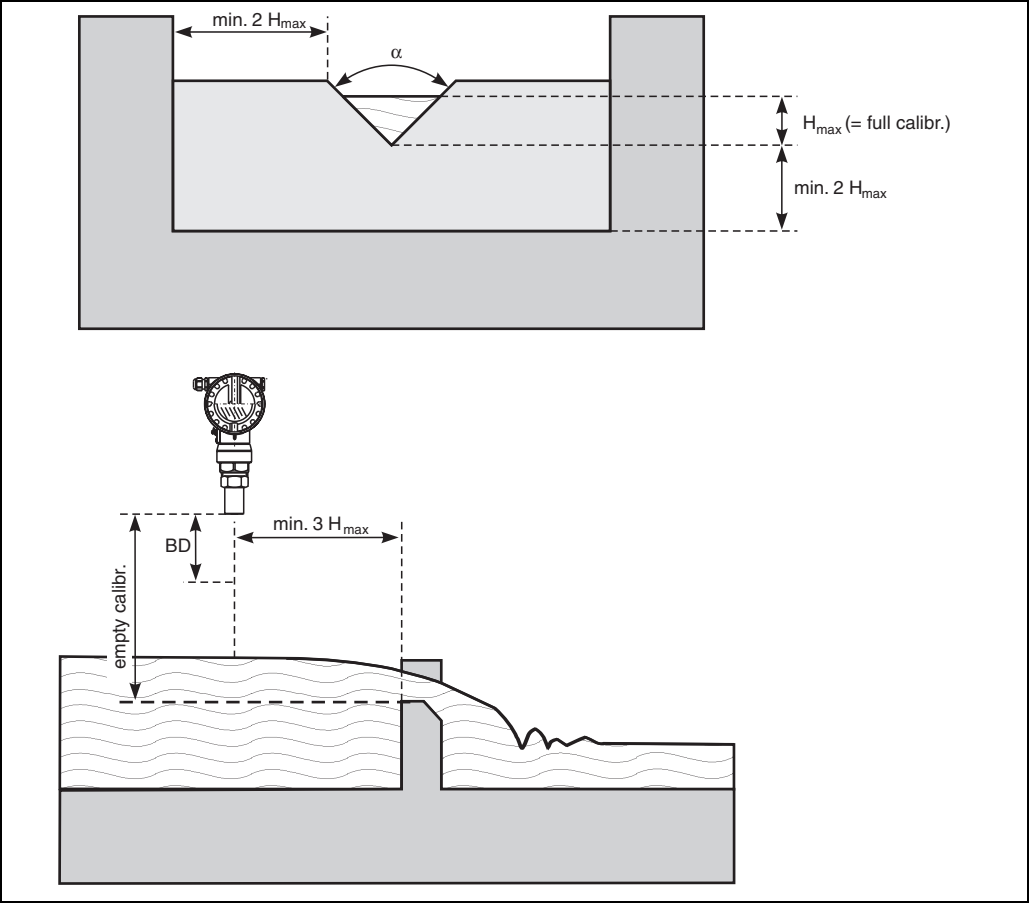

100-FM14xxxx-17-00-00-en-012

### Blocking distance, nozzle installation

Install the Prosonic M at a height so that the blocking distance BD is not undershot, even at maximum fill level. Use a pipe nozzle if you cannot maintain the blocking distance in any other way. The interior of the nozzle must be smooth and may not contain any edges or welded joints. In particular, there should be no burr on the inside of the tank side nozzle end. Note the specified limits for nozzle diameter and length. To minimise disturbing factors, we recommend an angled socket edge (ideally 45°).

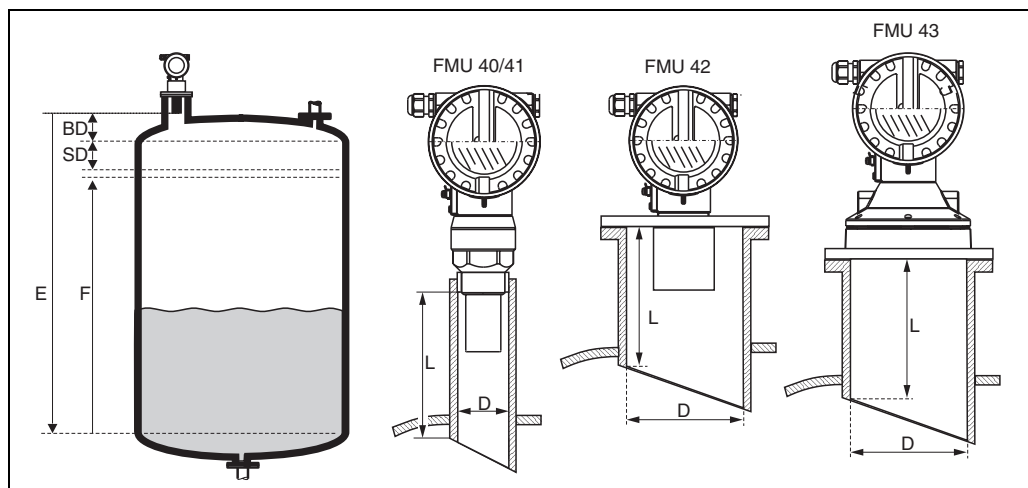

**BD:** blocking distance; **SD:** safety distance; **E:** empty calibration; **F:** full calibration (span); **D:** nozzle diameter; **L:** nozzle length

Sensor	BD	Max. range liquids	Max. range bulk materials	nozzle diameter	max. nozzle length
FMU 40	0.25 m	5 m	2 m	50 mm	ca. 80 mm
				80 mm	ca. 240 mm
				100 mm	ca. 300 mm
FMU 41	0.35 m	8 m	3.5 m	80 mm	ca. 240 mm
				100 mm	ca. 300 mm
FMU 42	0.4 m	10 m	5 m	80 mm	ca. 250 mm
				100 mm	ca. 300 mm
FMU 43	0.6 m	15 m	7 m	min. 100 mm	ca. 300 mm



#### Caution!


If the blocking distance is undershot, it may cause device malfunction.




#### Note!

In order to notice if the level approaches the blocking distance, you can specify a safety distance (SD). If the level is within this safety distance, the Prosonic M outputs a warning or alarm message.

## Ambient conditions


<b>Ambient temperature</b>	<p>-40 °C ... +80 °C</p> <p>The functionality of the LC display becomes restricted at <math>T_u &lt; -20\text{ °C}</math> and <math>T_u &gt; +60\text{ °C}</math>. If the device is operated outdoors in strong sunlight, you should use a protective cover.</p>
<b>Storage temperature</b>	-40 °C ... +80 °C
<b>Resistance to alternating temperature cycles</b>	to DIN EN 60068-2-14; Nb test : +80°C/-40°C, 1 K/min, 100cycles
<b>Climate class</b>	DIN EN 60068-2-38 (Test Z/AD) DIN/IEC 68 T2-30Db
<b>Ingress protection</b>	<ul style="list-style-type: none"> <li>■ With closed housing, tested according to <ul style="list-style-type: none"> <li>– IP 68, NEMA 6P (24h at 1.83m under water surface)</li> <li>– IP 66, NEMA 4x</li> </ul> </li> <li>■ With open housing: IP 20, NEMA 1 (also ingress protection of the display)</li> </ul> <p> Caution! Degree of protection IP 68 NEMA 6P applies for M12 PROFIBUS-PA plugs only when the PROFIBUS cable is plugged in.</p>
<b>Vibration resistance</b>	DIN EN 60068-2-64 / IEC 68-2-64: 20...2000 Hz, 1 (m/s <sup>2</sup> ) <sup>2</sup> /Hz; 3 x 100 min
<b>Electromagnetic compatibility (EMC)</b>	<ul style="list-style-type: none"> <li>■ Interference emission to EN 61326, Equipment Class B</li> <li>■ Interference immunity to EN 61326, Appendix A (Industrial) and NAMUR Recommendation NE 21 (EMC).</li> <li>■ A standard installation cable is sufficient if only the analogue signal is used. Use a screened cable when working with a superimposed communication signal (HART).</li> </ul>

## Process conditions

<b>Process temperature</b>	<p>-40 °C ... +80 °C</p> <p>A temperature sensor is integrated in the sensor for correction of the temperature-dependent time-of-flight.</p>
<b>Process pressure</b>	<ul style="list-style-type: none"> <li>■ FMU 40/41: 0.7 bar ... 3bar abs.</li> <li>■ FMU 42/43: 0.7 bar ... 2.5bar abs.</li> </ul> <p> Note! For pressures less than 0.7 bar please contact Endress+Hauser</p>

## Mechanical construction

### Design / dimensions

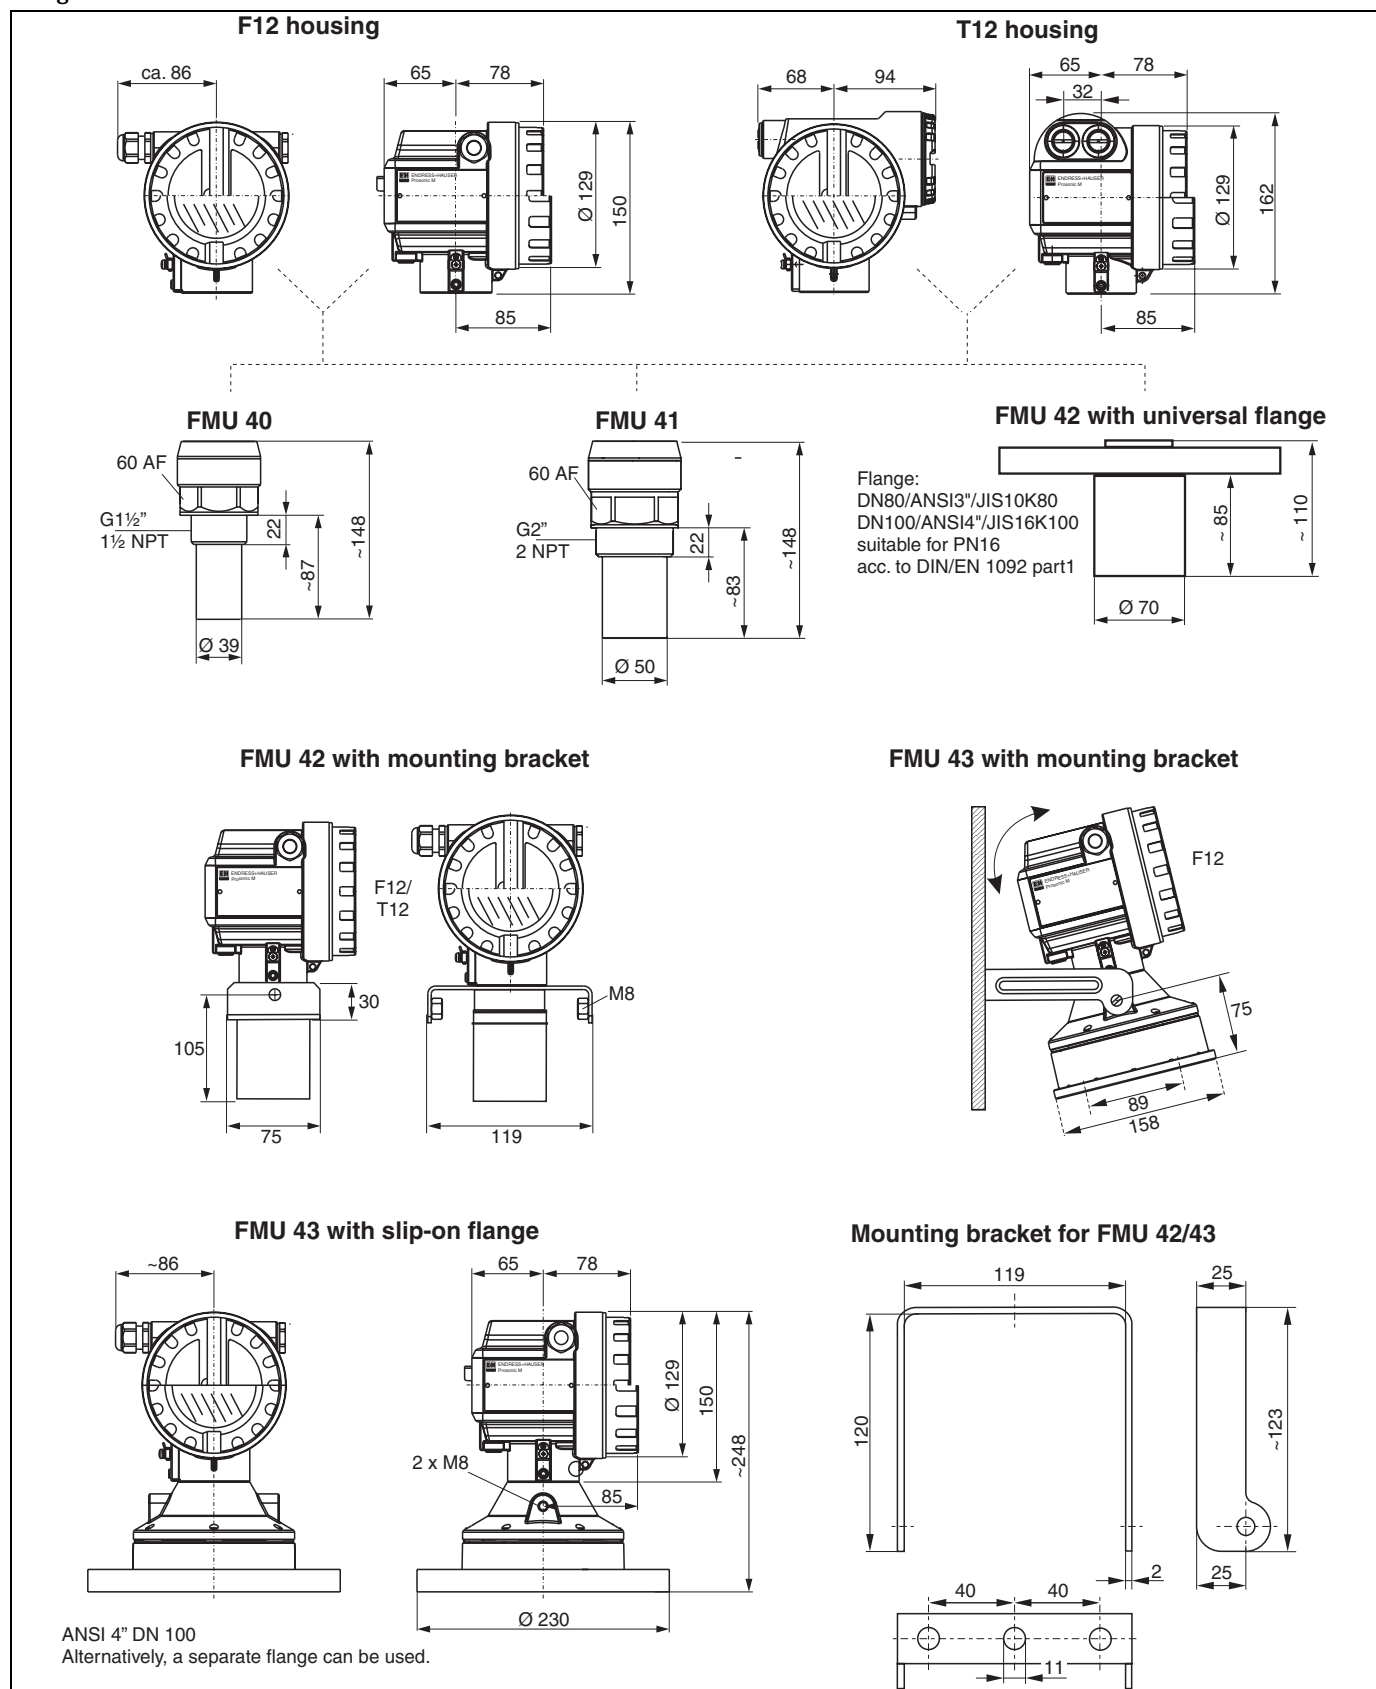

100-FMU4xxxx-06-00-00-es-003

**Weight**

Sensor	Weight
FMU 40	approx. 2,5 kg
FMU 41	approx. 2,6 kg
FMU 42	approx. 3 kg
FMU 43	approx. 3,5 kg

**Housing design****Types of housings**

- F12 housing with sealed terminal compartment for standard or EEx ia applications
- T12 housing with separate terminal compartment and explosionproof encapsulation

**Material**

Aluminium, seawater resistant, chromed, powder-coated

**Cover**

- Aluminium, for version without on-site display
- Inspection glass for version with on-site display. This version cannot be supplied together with the ATEX II 1/2 D certificate.


**Process connection,  
sealing material,  
sensor material**

Sensor	Process connection	Material in contact with process
FMU 40	<ul style="list-style-type: none"> <li>■ Thread G 1½"</li> <li>■ Thread NPT 1½" - 11.5</li> </ul>	Sensor: PVDF Seal: EPDM
FMU 41	<ul style="list-style-type: none"> <li>■ Thread 2"</li> <li>■ Thread NPT 2" - 11,5</li> </ul>	Sensor: PVDF Seal: EPDM
FMU 42	<ul style="list-style-type: none"> <li>■ Universal flange DN 80 / ANSI 3" / JIS10K80</li> <li>■ Universal flange DN 100 / ANSI 4" / JIS16K100</li> <li>■ Mounting bracket</li> </ul>	Sensor: PVDF Seal: VITON or EPDM Flange: PP, PVDF or SS 316L
FMU 43	<ul style="list-style-type: none"> <li>■ Universal flange DN 100 / ANSI 4" / JIS16K100</li> <li>■ Mounting bracket</li> </ul>	Sensor: UP and SS 316Ti Seal: EPDM Flange: PP or SS 316Ti

## Human interface

### Display and operating elements

The LCD module VU 331 for display and operation is located beneath the housing cover. The measured value is legible through the glass in the cover. Open the cover to operate the device.

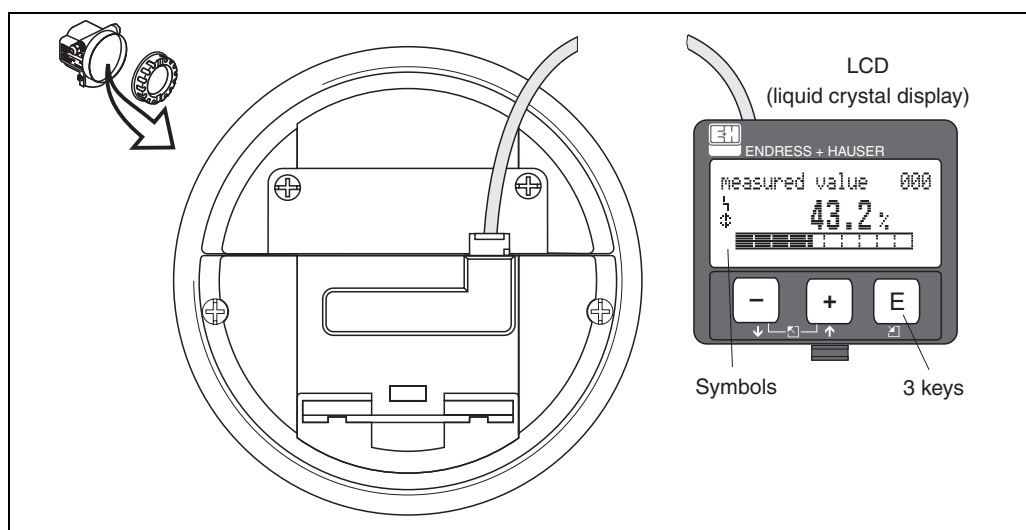

100-FMxxxxx-07-00-00-en-001

Symbol in display				
Meaning	Alarm	Warning	Communication	Security Locking

### Function of the keys


Key(s)	Meaning
or	Navigate upwards in the selection list Edit numeric value within a function
or	Navigate downwards in the selection list Edit numeric value within a function
or	Navigate to the left within a function group
	Navigate to the right within a function group, confirmation.
and or and	Contrast settings of the LCD
and  and	Hardware lock / unlock After a hardware lock, an operation of the instrument via display or communication is not possible! The hardware can only be unlocked via the display. An unlock parameter must be entered to do so.



On-site operation

Operation with VU 331


The LC-Display VU 331 allows configuration via 3 keys directly at the instrument. All device functions can be set through a menu system. The menu consists of function groups and functions. Within a function, application parameters can be read or adjusted. The user is guided through a complete configuration procedure.

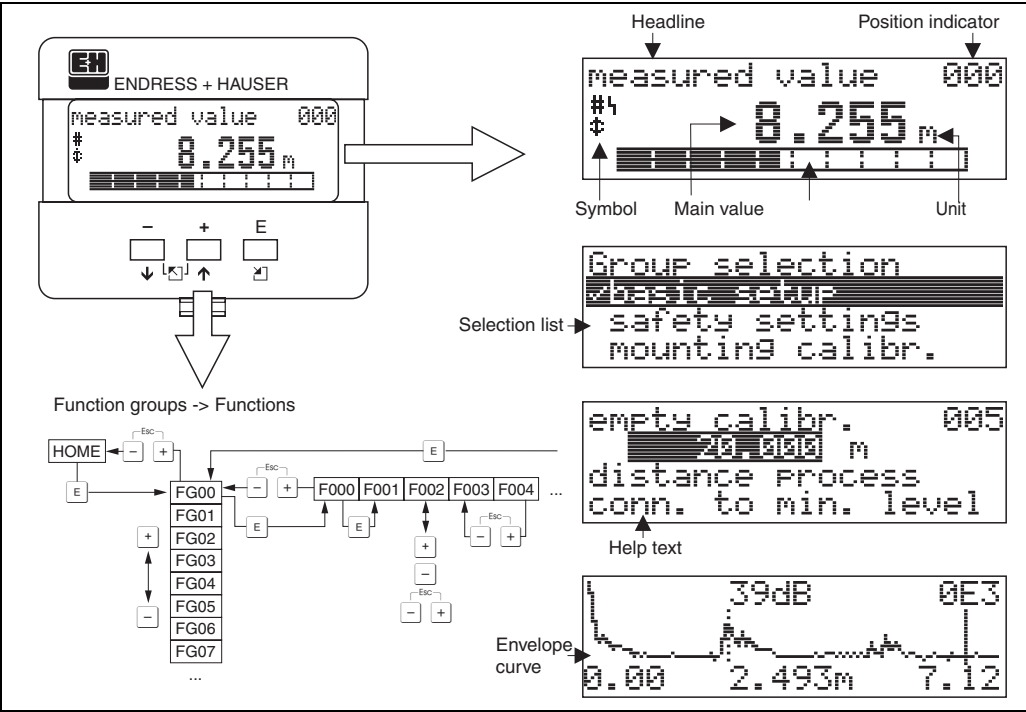

L00-FMU4xxxx-07-00-00-en-004

Operation with the handheld terminal DXR 375

On devices with HART communication, you can also access the menu using the handheld terminal DXR 375.

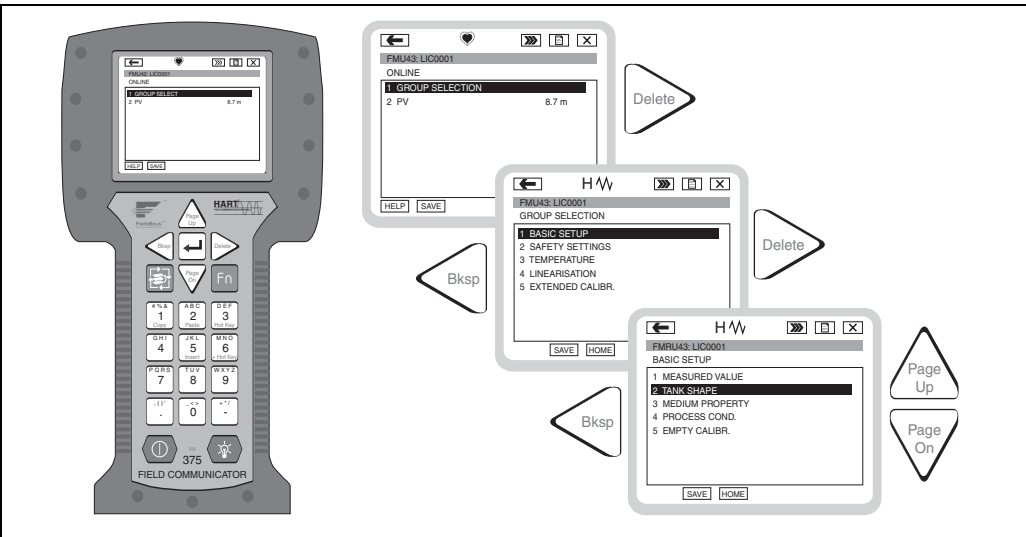

L00-FMU4xxxx-07-00-00-de-005

## Remote operation

## Operation with ToF Tool

The ToF Tool is a graphical operation software for instruments from Endress+Hauser. It is used to support commissioning, securing of data, signal analysis and documentation of the instruments. It is compatible with the following operating systems: WinNT4.0, Win2000 and WinXP.


The ToF Tool supports the following functions:

- Online configuration of transmitters
- Signal analysis via envelope curve
- Linearisation table (graphically supported creation, editing, importing and exporting)
- Loading and saving of instrument data (Upload/Download)
- Documentation of measuring point

Connection options


- HART with Commubox FXA 191 (available as accessory)
- PROFIBUS PA
- Service-interface with adapter FXA 193 (available as accessory)

*Menu-guided commissioning:*

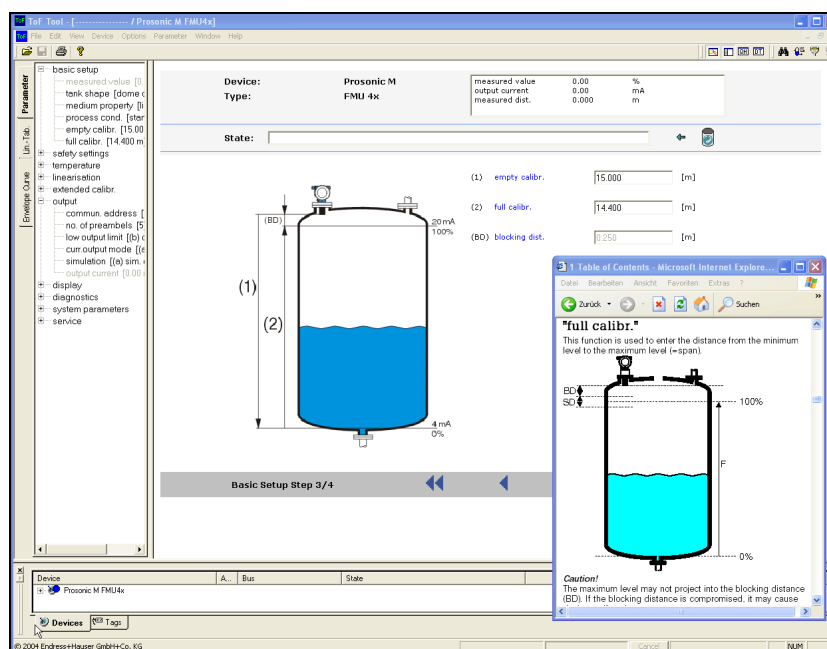

L00-FMU4xxxx-19-00-00-en-003

### Signal analysis via envelope curve:

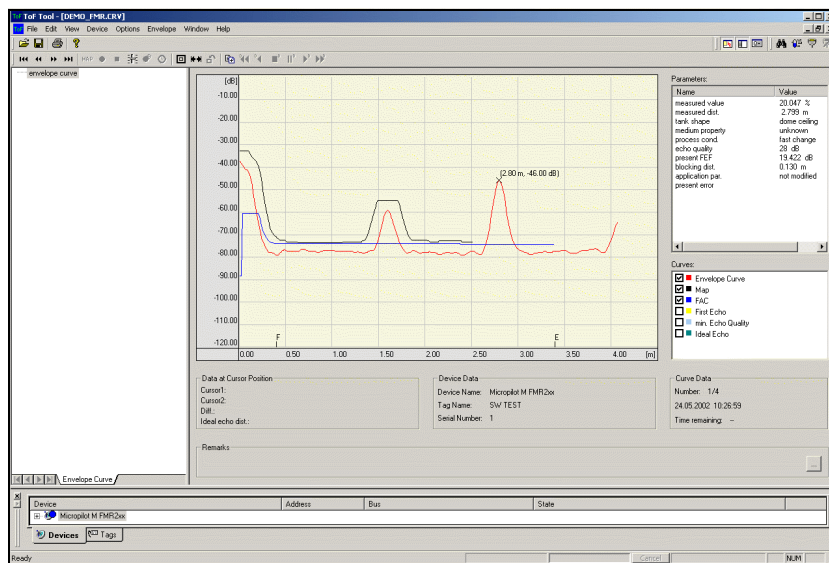

100-FMU4xxxx-19-00-00-en-004

### Operation with FieldCare

FieldCare is Endress+Hauser's FDT based Plant Asset Management Tool. It can configure all intelligent field devices in your plant and supports you in managing them. By using status information, it also provides a simple but effective means of checking their health.

- Supports Ethernet, HART, PROFIBUS, FOUNDATION Fieldbus etc.
- Operates all Endress+Hauser devices
- Operates all third-party actuators, I/O systems and sensors supporting the FDT standard
- Ensures full functionality for all devices with DTMs
- Offers generic profile operation for any third-party fieldbus device that does not have a vendor DTM

### Operation with Commuwin II (for communication variants HART or PROFIBUS-PA)

Commuwin II is an operating software with graphical support (MS Windows) for intelligent transmitters with the communication protocols Rackbus, Rackbus RS-485, HART and PROFIBUS-PA.

Commuwin II supports the following functions:

- Online configuration of transmitters
- Loading and saving of instrument data (Upload/Download)
- Orderly visualisation of measured values and limit values
- Display and recording of measured values with a line recorder

It is not possible to display envelope curves with Commuwin II. To display them, please use the ToF Tool program supplied.

Connections:

- HART with Commubox FXA 191 (available as accessory)
- PROFIBUS PA

### Operation with NI-FBUS Configurator (only Foundation Fieldbus)

The NI-FBUS Configurator is an easy-to-use graphical environment for creating linkages, loops, and a schedule based on the fieldbus concepts.

You can use the NI-FBUS Configurator to configure a fieldbus network as follows:

- Set block and device tags
- Set device addresses
- Create and edit function block control strategies (function block applications)
- Configure vendor-defined function and transducer blocks
- Create and edit schedules
- Read and write to function block control strategies (function block applications)
- Invoke Device Description (DD) methods
- Display DD menus
- Download a configuration
- Verify a configuration and compare it to a saved configuration
- Monitor a downloaded configuration
- Replace devices
- Save and print a configuration

## Certificates and Approvals

<b>CE mark</b>	The measuring system meets the legal requirements of the EC-guidelines. Endress+Hauser confirms the instrument passing the required tests by attaching the CE-mark.
<b>Ex-Zulassung</b>	Die erhältlichen Zertifikate sind in den Bestellinformationen aufgeführt. Beachten Sie jeweils die zugehörigen Sicherheitshinweise (XA) bzw. Control oder Installation Drawings (ZD).
<b>External standards and guidelines</b>	<p><b>EN 60529</b> Protection class of housing (IP-code)</p> <p><b>EN 61326</b> Electromagnetic compatibility (EMC requirements)</p> <p><b>NAMUR</b> Standards committee for measurement and control in the chemical industry</p>

## Ordering information

### Product structure FMU 40

Certificates					
A	Variant for non-hazardous area				
1	ATEX II 1/2 G or II 2 G; EEX ia IIC T6				
4	ATEX II 1/2 G or II 2 G; EEX d [ia] IIC T6				
G	ATEX II 3G EEx nA II T6				
2	ATEX II 1/2D, Alu blind cover				
5	ATEX II 1/3D				
S	FM IS Cl. I,II,III Div. 1 Gr. A-G / NI Cl. I Div. 2				
T	FM XP Cl. I,II,III Div. 1 Gr. A-G				
U	CSA IS Cl. I,II,III Div. 1 Gr. A-G / NI Cl. I Div. 2				
V	CSA XP Cl. I,II,III Div. 1 Gr. A-G				
N	CSA General Purpose				
K	TIIS Ex ia II C T6				
Y	Special certificate				
Process connection					
R	G 1½" thread ISO 228				
N	NPT 1½" - 11,5 thread				
Y	Special version				
Power supply/communication					
B	2 wire, 4...20mA-loop/HART				
H	4 wire, 10,5...32VDC / 4-20mA HART				
G	4 wire, 90...253VAC / 4-20mA HART				
D	2 wire, PROFIBUS PA				
F	2 wire, Foundation Fieldbus				
Y	Special version				
Display / on-site operation					
1	Without LC display				
2	With LC display VU 331 incl. on-site operation				
3	Prepared for remote display FHX 40				
9	Special version				
Housing					
A	Aluminium F12 housing coated to IP 68				
C	Aluminium T12 housing coated to IP 68; with separate terminal compartment				
D	Aluminium T12 housing coated to IP 68; with separate terminal compartment; with overvoltage protection				
9	Special version				
Screw union/entry					
2	M20x1.5 screw union				
3	G 1/2" entry				
4	NPT 1/2" entry				
5	M12 PROFIBUS-PA plug-in connector				
6	7/8" FF plug				
9	Special version				
FMU 40 -					Product designation

## Product structure FMU 41

Certificates					
A					Variant for non-hazardous area
1					ATEX II 1/2 G or II 2 G; EEX ia IIC T6
4					ATEX II 1/2 G or II 2 G; EEX d [ia] IIC T6
G					ATEX II 3G EEx nA II T6
2					ATEX II 1/2D, Alu blind cover
5					ATEX II 1/3D
S					FM IS Cl. I,II,III Div. 1 Gr. A-G / NI Cl. I Div. 2
T					FM XP Cl. I,II,III Div. 1 Gr. A-G
U					CSA IS Cl. I,II,III Div. 1 Gr. A-G / NI Cl. I Div. 2
V					CSA XP Cl. I,II,III Div. 1 Gr. A-G
N					CSA General Purpose
K					TIIS Ex ia II C T6
Y					Special certificate
Process connection					
R					G 2" thread ISO 228
N					NPT 2" - 11,5 thread
Y					Special version
Power supply/communication					
B					2 wire, 4...20mA-loop/HART
H					4 wire, 10,5...32VDC / 4-20mA HART
G					4 wire, 90...253VAC / 4-20mA HART
D					2 wire, PROFIBUS PA
F					2 wire, Foundation Fieldbus
Y					Special version
Display / on-site operation					
1					Without LC display
2					With LC display VU 331 incl. on-site operation
3					Prepared for remote display FHX 40
9					Special version
Housing					
A					Aluminium F12 housing coated to IP 68
C					Aluminium T12 housing coated to IP 68 with separate terminal compartment
D					Aluminium T12 housing coated to IP 68; with separate terminal compartment; with overvoltage protection
9					Special version
Screw union/entry					
2					M20x1.5 screw union
3					G 1/2" entry
4					NPT 1/2" entry
5					M12 PROFIBUS-PA plug-in connector
6					7/8" FF plug
9					Special version
FMU 41 -					Product designation

## Product structure FMU 42

Certificates									
A	Variant for non-hazardous area								
1	ATEX II 1/2 G EEX ia IIC T6								
4	ATEX II 1/2 G EEX d [ia] IIC T6								
G	ATEX II 3G EEx nA II T6 (in preparation)								
S	FM IS Cl. I,II,III Div. 1 Gr. A-G / NI Cl. I Div. 2								
T	FM XP Cl. I,II,III Div. 1 Gr. A-G								
U	CSA IS Cl. I,II,III Div. 1 Gr. A-G / NI Cl. I Div. 2								
V	CSA XP Cl. I,II,III Div. 1 Gr. A-G								
N	CSA General Purpose								
K	TIIS Ex ia II C T6 (in preparation)								
Y	Special certificate								
Process connection									
M	mounting bracket FAU20								
P	DN80/ANSI 3"/JIS10K80, PP, Universal flange								
Q	DN80/ANSI 3"/JIS10K80, PVDF, Universal flange								
S	DN80/ANSI 3"/JIS10K80, 316L, Universal flange								
T	DN100/ANSI 4"/JIS16K100, PP, Universal flange								
U	DN100/ANSI 4"/JIS16K100, PVDF, Universal flange								
V	DN100/ANSI 4"/JIS16K100, 316L, Universal flange								
Y	Special version								
Power supply/communication									
B	2 wire, 4...20mA-loop/HART								
H	4 wire, 10,5...32VDC / 4-20mA HART								
G	4 wire, 90...253VAC / 4-20mA HART								
D	2 wire, PROFIBUS PA								
F	2 wire, Foundation Fieldbus								
Y	Special version								
Display / on-site operation									
1	Without LC display								
2	With LC display VU 331 incl. on-site operation								
3	Prepared for remote display FHX 40								
9	Special version								
Housing									
A	Aluminium F12 housing coated to IP 68								
C	Aluminium T12 housing coated to IP 68, with separate terminal compartment								
D	Aluminium T12 housing coated to IP 68, with separate terminal compartment; with overvoltage protection								
Y	Special version								
Gland/Entry									
2	M20x1.5 gland								
3	G 1/2" entry								
4	NPT 1/2" entry								
5	M12 PROFIBUS-PA plug								
6	7/8" FF plug								
9	Special version								
Sealing Sensor/Flange									
2	VITON flat sealing								
3	EPDM flat sealing								
9	special version								
Additional options									
A	Additional options not selected								
FMU 42 -									Product designation

## Product structure FMU 43

Certificates				
A	Variant for non-hazardous area			
2	ATEX II 1/2 D or II 2 D, Aluminium Deckel			
5	ATEX II 1/3 D or II 3 D, Sichtdeckel			
M	FM DIP Class II, III, Div. 1, Gr. E,F,G NI			
N	CSA General Purpose			
P	CSA DIP, Class II, III, Div. 1, Gr. E,F,G NI			
Y	Special version			
Process connection/material				
P	Flange DN 100/ANSI 4"/JIS 16K100, PP (universal slip-on flange included)			
S	Flange DN 100/ANSI 4"/JIS 16K100, SS 316TI (universal slip-on flange included)			
K	Without slip-on flange/without mounting bracket (customer mounting equipment)			
M	With mounting bracket			
Y	Special version			
Power supply/communication				
H	4 wire, 10,5...32VDC / 4-20mA HART			
G	4 wire, 90...253VAC / 4-20mA HART			
D	2 wire, PROFIBUS PA			
F	2 wire, Foundation Fieldbus			
Y	Special version			
Display / on-site operation				
1	Without LC display			
2	With LC display VU 331 incl. on-site operation			
3	Prepared for remote display FHX 40			
9	Special version			
Housing				
A	Aluminium F12 housing coated to IP 68			
9	Special version			
Screw union/entry				
2	M20x1.5 screw union			
3	G 1/2" entry			
4	NPT 1/2" entry			
5	M12 PROFIBUS-PA plug-in connector			
6	7/8" FF plug			
9	Special version			
FMU 43 -				Product designation

## Scope of delivery


- Instrument according to the version ordered
- "ToF Tool FieldTool Package (2 CD-ROMs: Program CD-ROM, Utility CD-ROM)
- Operating manual according to the communication version
- for certified instrument versions: Safety Instructions, Control- or Installation drawings
- for FMU 40 \*R\*\*\*\* and FMU 41 \*R\*\*\*\*: counter nut (PC)
- for FMU 40/41: sealing ring (EPDM)
- for gland M20x1.5:
  - 1 cable gland for 2-wire instruments
  - 2 cable glands for 4-wire instruments
 The cable glands are mounted on delivery.




## Accessories

### Weather protection cover

A Weather protection cover made of stainless steel is recommended for outdoor mounting (order code: 543199-0001). The shipment includes the protective cover and tension clamp.

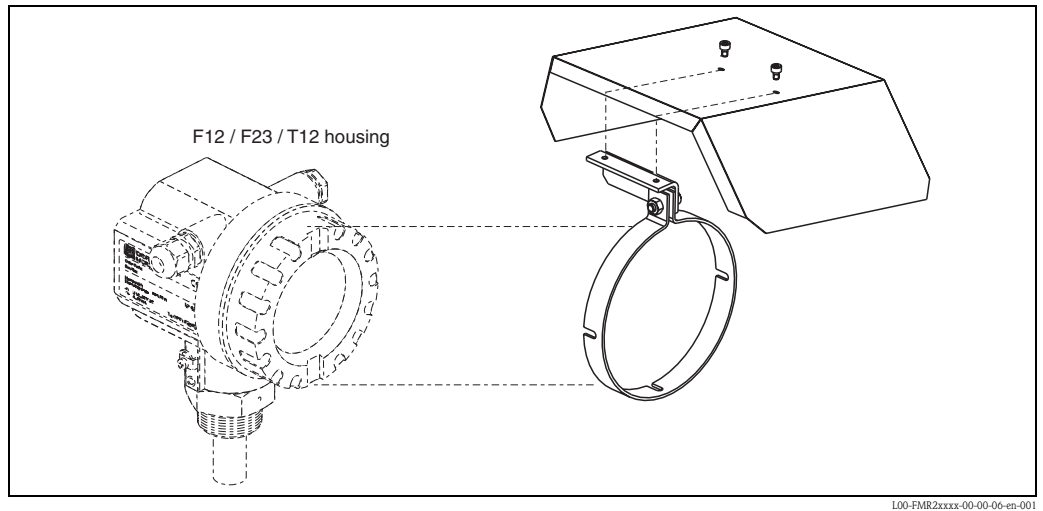


### Installation bracket for FMU 40/41

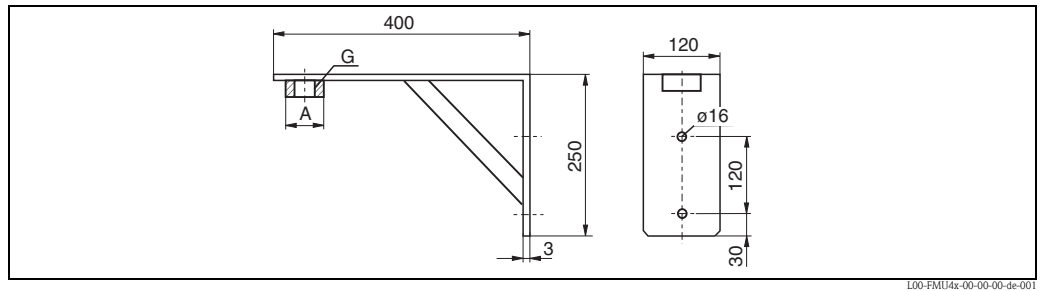

- for FMU 40, G1½: Order No. 942669-0000
- for FMU 41, G2: Order No. 942669-0001

suited for NPT 1½" and 2" as well

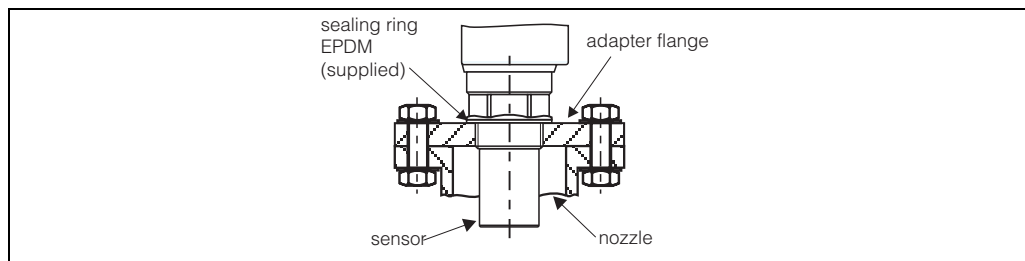**Adapter flange for FMU 40 /  
FMU 41**


L00-FMU1X3XXX-00-00-00-en-001


**Version with metrical thread (FAU 70 E)**

	Version		
	12	DN 50 PN 16	
	14	DN 80 PN 16	
	15	DN 100 PN 16	
		Thread	
	3	G 1½, ISO 228	
	4	G 2, ISO 228	
		Material	
	2	1.4435 (316L)	
	7	PPs (Polypropylene)	
FAU 70 E			Product designation

**Version with conical thread(FAU 70 A)**

	Version		
	22	ANSI 2" 150 psi	
	24	ANSI 3" 150 psi	
	25	ANSI 4" 150 psi	
		Thread	
	5	NPT 1½ - 11,5	
	6	NPT 2 - 11,5	
		Material	
	2	1.4435 (316L)	
	7	PPs (Polypropylene)	
FAU 70 A			Product designation


## Cantilever

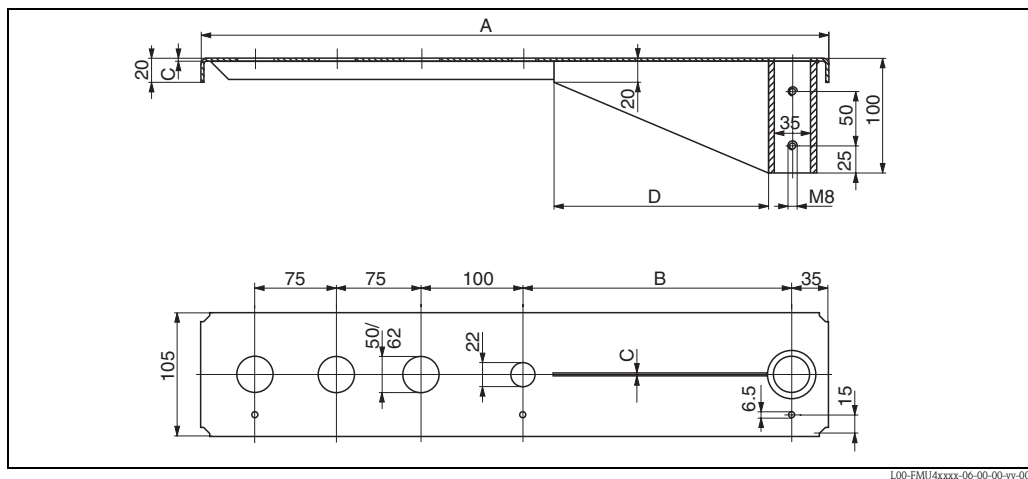

A	B	C	D	for Sensor	Material	Order Code
585 mm	250 mm	2 mm	200 mm	FMU 40	1.4301 (AISI 304)	52014132
					galv. steel	52014131
				FMU 41	1.4301 (AISI 304)	52014136
					galv. steel	52014135
1085 mm	750 mm	3 mm	300 mm	FMU 40	1.4301 (AISI 304)	52014134
					galv. steel	52014133
				FMU 41	1.4301 (AISI 304)	52014138
					galv. steel	52014137

- The 50 mm or 62 mm orifices serve for the mounting of the FMU 40 or FMU 41 sensor, respectively.
- The 22 mm orifice may be used for an additional sensor.


## Mounting Frame

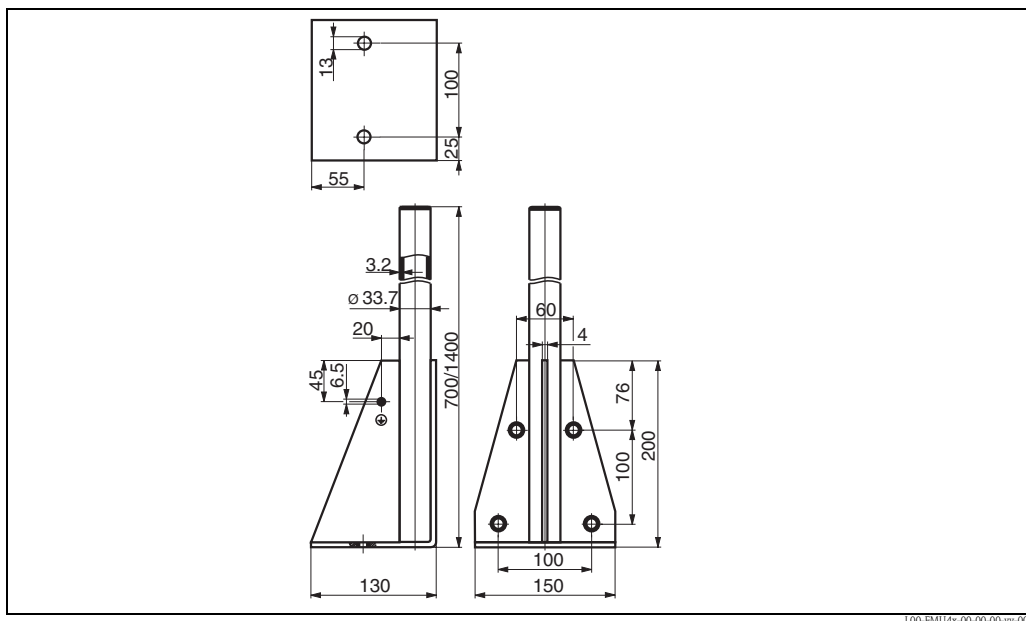

100-FMU4x-00-00-00-yy-005

Height	Material	Order Code
700 mm	galv. steel	919791-0000
700 mm	1.4301 (AISI 304)	919791-0001
1400 mm	galv. steel	919791-0002
1400 mm	1.4301 (AISI 304)	919791-0003

## Wall Bracket

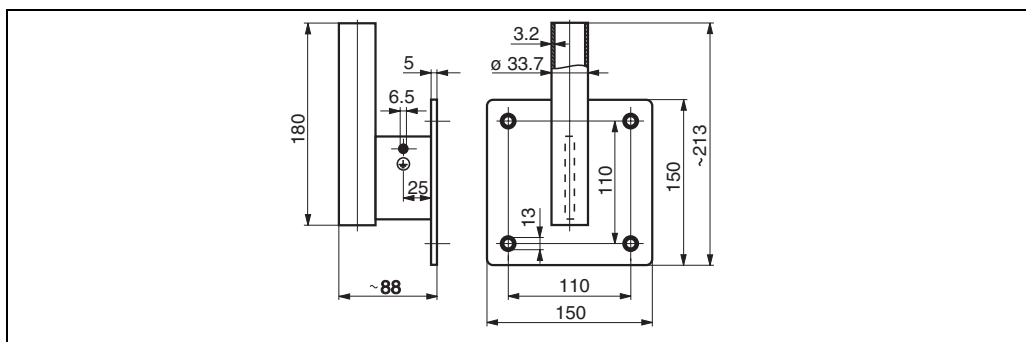

100-FMU4x-00-00-00-yy-006

Material	Order Code
galv. steel	919792-0000
316Ti/1.4571	919792-0001

## Commubox FXA191

For intrinsically safe communication between instruments with the HART protocol and the RS232 interface of a PC. Further Information can be found in Technical Information TI 237F.

**Service Interface FXA193**

The Service-Interface connects the Service plug of Proline and ToF instruments with the 9 pin RS 232C interface of a PC. (USB connectors must be equipped with a usual commercial USB/Serial adapter.)

**Product structure**

Approvals		
A	For use in non-hazardous areas	
B	ATEX II (1) GD	
C	CSA/FM Class I Div. 1	
D	ATEX, CSA, FM	
9	other	

Connection cable		
B	Connection cable for ToF devices	
E	Connection cable for Proline and ToF devices	
H	Connection cable for Proline and ToF devices and Connection cable for Ex two-wire devices	
X	without connection cable	
9	others	


FXA193-			Complete product designation
---------	--	--	------------------------------

**Associated documentation**

- Technical Information: TI063D
- Safety Instructions for ATEX II (1) GD: XA077D
- Supplementary information for the cable adapters: SD092D

## Remote display FHX40

## Dimensions

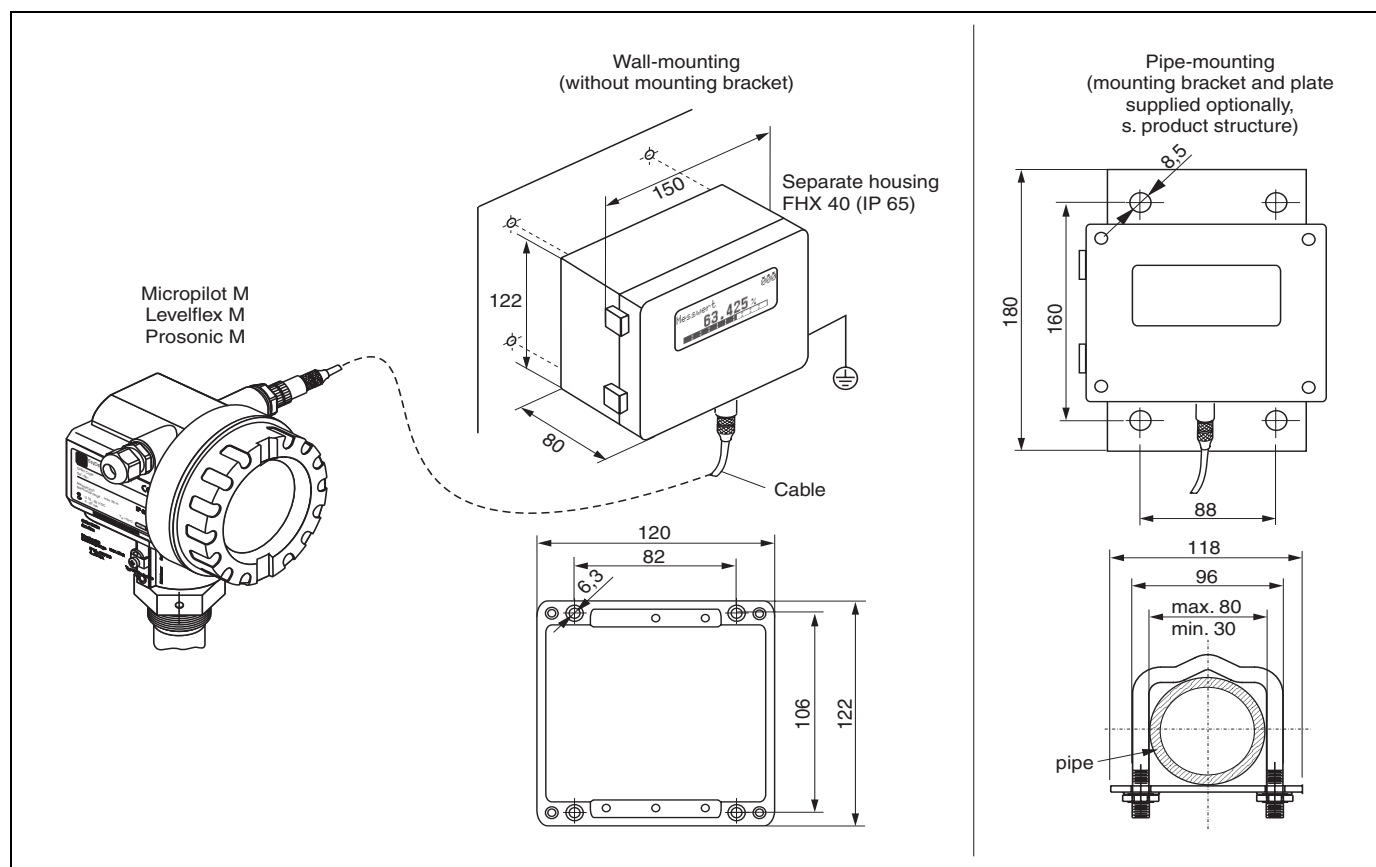

100-FMxxxxx-00-00-06-en-003

## Technical data (cable and housing) and product structure:

Max. cable length	20 m (65 ft)
Temperature range	-30 °C...+70 °C (-22 °F...158 °F)
Degree of protection	IP65 acc. to EN 60529 (NEMA 4)
Materials	Housing: AL Si 12; cable glands: nickle plated brass
Dimensions [mm] / [inch]	122x150x80 (HxWxD) / 4.8x5.9x3.2

Approval:			
A	Nn-hazardous area		
I	ATEX II 2 G EEx ia IIC T6, ATEX II 3D		
S	FM IS Cl.I Div.1 Gr.A-D		
U	CSA IS Cl.I Div.1 Gr.A-D		
N	CSA General Purpose		
Cable length:			
1	20m/65ft		
Additional option:			
A	Basic version		
B	Mounting bracket, pipe 1" / 2"		
FHX40 -			Complete product designation

## Supplementary documentation

### System Information

#### SI 005F

Ultrasonic level measurement

### Operating manual

Depending on the communication variant ordered, the following operating manuals are supplied with the device:

Communication	Operating manual
4 ... 20mA, HART	BA 237F
Profibus PA	BA 238F
Foundation Fieldbus	BA 239F

These instructions describe the installation and first commissioning of the Prosonic M. From the operating menu, all functions are included, which are required for standard measurement tasks. Additional functions are **not** contained in the manual.

### Description of device functions

#### BA 240F

This contains a detailed description of **all** the functions of the Prosonic M and is valid for all communication variants.

A pdf file of this document can be found

- in the supplied "ToF Tool - FieldTool Package" at "Help/ToF Tool Help/ Online Manual/ Operating Manual/Ultrasonic/Prosonic M FMU4x Functions"<sup>1</sup>.
- in the internet at "www.endress.com". Click "Download" and enter the product code "FMU4\*" into the search form.

### Short instructions

#### KA 183F

can be found under the device housing cover.

The most important menu functions are summarised on this sheet. It is intended primarily as a memory jogger for users who are familiar with the operating concept of Endress+Hauser time-of-flight instruments.

### Safety Instructions

The following safety instructions are supplied with ATEX-certified device versions. If the devices are used in explosive areas, comply with all the specifications in these safety instructions.

Instrument version	Certificate	Communication	Housing	Safety Instructions
<ul style="list-style-type: none"> <li>■ FMU40 - 1*B*A*</li> <li>■ FMU41 - 1*B*A*</li> <li>■ FMU42 - 1*B*A***</li> </ul>	ATEX II 1/2 G or II 2 G EEx ia II C T6	HART (2-wire)	F12	XA 174F
<ul style="list-style-type: none"> <li>■ FMU40 - 1*B*D*</li> <li>■ FMU41 - 1*B*D*</li> <li>■ FMU42 - 1*B*D***</li> </ul>	ATEX II 1/2 G or II 2 G EEx ia II C T6	HART (2-wire)	T12 with overvoltage protection	XA 224F
<ul style="list-style-type: none"> <li>■ FMU40 - 1*D*A* - 1*F*A*</li> <li>■ FMU41 - 1*D*A* - 1*F*A*</li> <li>■ FMU42 - 1*D*A*** - 1*F*A***</li> </ul>	ATEX II 1/2 G or II 2 G EEx ia II C T6	<ul style="list-style-type: none"> <li>■ Profibus-PA</li> <li>■ Foundation Fieldbus</li> </ul>	F12	XA 175F
<ul style="list-style-type: none"> <li>■ FMU40 - 1*D*D* - 1*F*D*</li> <li>■ FMU41 - 1*D*D* - 1*F*D*</li> <li>■ FMU42 - 1*D*D*** - 1*F*D***</li> </ul>	ATEX II 1/2 G or II 2 G EEx ia II C T6	<ul style="list-style-type: none"> <li>■ Profibus-PA</li> <li>■ Foundation Fieldbus</li> </ul>	T12 with overvoltage protection	XA 225F

1) If the Operating Instructions have not been installed together with the "ToF Tool - FieldTool Package", they can be added to the installation subsequently.

Instrument version	Certificate	Communication	Housing	Safety Instructions
<ul style="list-style-type: none"> <li>■ FMU40 - 4*B*C* - 4*D*C* - 4*F*C*</li> <li>■ FMU41 - 4*B*C* - 4*D*C* - 4*F*C*</li> <li>■ FMU42 - 4*B*C*** - 4*D*C*** - 4*F*C***</li> </ul>	ATEX II 1/2 G or II 2 G EEx d [ia] II C T6	<ul style="list-style-type: none"> <li>■ HART (2-wire)</li> <li>■ Profibus-PA</li> <li>■ Foundation Fieldbus</li> </ul>	T12	XA 176F
<ul style="list-style-type: none"> <li>■ FMU40 - G*****</li> <li>■ FMU41 - G*****</li> <li>■ FMU42 - G*****</li> </ul>	ATEX II 3G EEx nA II T6	<ul style="list-style-type: none"> <li>■ HART (2-wire)</li> <li>■ HART (4-wire, DC)</li> <li>■ HART (4-wire, AC)</li> <li>■ Profibus-PA</li> <li>■ Foundation Fieldbus</li> </ul>	<ul style="list-style-type: none"> <li>■ F12</li> <li>■ T12</li> <li>■ T12 with overvoltage protection</li> </ul>	XA 179F
<ul style="list-style-type: none"> <li>■ FMU40 - 2*B*A* - 2*D*A* - 2*F*A* - 5*B*A* - 5*D*A* - 5*F*A*</li> <li>■ FMU41 - 2*B*A* - 2*D*A* - 2*F*A* - 5*B*A* - 5*D*A* - 5*F*A*</li> <li>■ FMU42 - 2*B*A*** - 2*D*A*** - 2*F*A*** - 5*B*A*** - 5*D*A*** - 5*F*A***</li> </ul>	<ul style="list-style-type: none"> <li>■ ATEX II 1/2D</li> <li>■ ATEX II 1/3D</li> </ul>	<ul style="list-style-type: none"> <li>■ HART (2-wire)</li> <li>■ Profibus-PA</li> <li>■ Foundation Fieldbus</li> </ul>	F12	XA 180F
<ul style="list-style-type: none"> <li>■ FMU40 - 2*G*A* - 2*H*A* - 5*G*A* - 5*H*A*</li> <li>■ FMU41 - 2*G*A* - 2*H*A* - 5*G*A* - 5*H*A*</li> <li>■ FMU42 - 2*G*A*** - 2*H*A*** - 5*G*A*** - 5*H*A***</li> </ul>	<ul style="list-style-type: none"> <li>■ ATEX II 1/2D</li> <li>■ ATEX II 1/3 D</li> </ul>	<ul style="list-style-type: none"> <li>■ HART (4-wire, DC)</li> <li>■ HART (4-wire, AC)</li> </ul>	F12	XA 259
<ul style="list-style-type: none"> <li>■ FMU43 - 2*G*A* - 2*H*A* - 5*G*A* - 5*H*A*</li> </ul>	<ul style="list-style-type: none"> <li>■ ATEX II 1/2 D or II 2 D</li> <li>■ ATEX II 1/3 D or II 3 D</li> </ul>	<ul style="list-style-type: none"> <li>■ HART (4-wire, DC)</li> <li>■ HART (4-wire, AC)</li> </ul>	F12	XA 177F
<ul style="list-style-type: none"> <li>■ FMU43 - 2*D*A* - 2*F*A* - 5*D*A* - 5*F*A*</li> </ul>	<ul style="list-style-type: none"> <li>■ ATEX II 1/2 D or II 2 D</li> <li>■ ATEX II 1/3 D or II 3 D</li> </ul>	<ul style="list-style-type: none"> <li>■ Profibus-PA</li> <li>■ Foundation Fieldbus</li> </ul>	F12	XA 178F



**Control drawings Installation drawings**

The following control or installation drawings are supplied with the FM, CSA and TIIS-certified device versions:

Instrument version	Certificate	Communication	Housing	Control or Installation Drawing
<ul style="list-style-type: none"> <li>■ FMU40 - S*B*A*</li> <li>■ FMU41 - S*B*A*</li> <li>■ FMU42 - S*B*A***</li> </ul>	FM IS	HART (2-wire)	F12	ZD 096F
<ul style="list-style-type: none"> <li>■ FMU40 - S*D*A* - S*F*A*</li> <li>■ FMU41 - S*D*A* - S*F*A*</li> <li>■ FMU42 - S*D*A*** - S*F*A***</li> </ul>	FM IS	<ul style="list-style-type: none"> <li>■ Profibus-PA</li> <li>■ Foundation Fieldbus</li> </ul>	F12	ZD 097F
<ul style="list-style-type: none"> <li>■ FMU40 - S*B*D*</li> <li>■ FMU41 - S*B*D*</li> <li>■ FMU42 - S*B*D***</li> </ul>	FM IS	HART (2-wire)	T12 with overvoltage protection	ZD 139F
<ul style="list-style-type: none"> <li>■ FMU40 - S*D* D* - S*F*D*</li> <li>■ FMU41 - S*D* D* - S*F*D*</li> <li>■ FMU42 - S*D* D*** - S*F*D***</li> </ul>	FM IS	<ul style="list-style-type: none"> <li>■ Profibus-PA</li> <li>■ Foundation Fieldbus</li> </ul>	T12 with overvoltage protection	ZD 140F
<ul style="list-style-type: none"> <li>■ FMU40 - T*B*C* - T*D*C* - T*F*C*</li> <li>■ FMU41 - T*B*C* - T*D*C* - T*F*C*</li> <li>■ FMU42 - T*B*C*** - T*D*C*** - T*F*C***</li> </ul>	FM XP	<ul style="list-style-type: none"> <li>■ HART (2-wire)</li> <li>■ Profibus PA</li> <li>■ Foundation Fieldbus</li> </ul>	T12	ZD 098F
<ul style="list-style-type: none"> <li>■ FMU40 - U*B*A*</li> <li>■ FMU41 - U*B*A*</li> <li>■ FMU42 - U*B*A***</li> </ul>	CSA IS	HART (2-wire)	F12	ZD 088F
<ul style="list-style-type: none"> <li>■ FMU40 - U*D*A* - U*F*A*</li> <li>■ FMU41 - U*D*A* - U*F*A*</li> <li>■ FMU42 - U*D*A*** - U*F*A***</li> </ul>	CSA IS	<ul style="list-style-type: none"> <li>■ Profibus-PA</li> <li>■ Foundation Fieldbus</li> </ul>	F12	ZD 099F
<ul style="list-style-type: none"> <li>■ FMU40 - U*B* D*</li> <li>■ FMU41 - U*B* D*</li> <li>■ FMU42 - U*B* D***</li> </ul>	CSA IS	HART (2-wire)	T12 with overvoltage protection	ZD 101F
<ul style="list-style-type: none"> <li>■ FMU40 - U*D*D* - U*F*D*</li> <li>■ FMU41 - U*D*D* - U*F*D*</li> <li>■ FMU42 - U*D*D*** - U*F*D***</li> </ul>	CSA IS	<ul style="list-style-type: none"> <li>■ Profibus-PA</li> <li>■ Foundation Fieldbus</li> </ul>	T12 with overvoltage protection	ZD 102F
<ul style="list-style-type: none"> <li>■ FMU40 - V*B*C* - V*D*C* - V*F*C*</li> <li>■ FMU41 - V*B*C* - V*D*C* - V*F*C*</li> <li>■ FMU42 - V*B*C*** - V*D*C*** - V*F*C***</li> </ul>	CSA XP	<ul style="list-style-type: none"> <li>■ HART (2-wire)</li> <li>■ Profibus PA</li> <li>■ Foundation Fieldbus</li> </ul>	T12	ZD 100F
<ul style="list-style-type: none"> <li>■ FMU 40 - K*****</li> <li>■ FMU 41 - K*****</li> </ul>	TIIS Ex ia IIC T6	HART	F12	ZD 138F

#### International Head Quarter

Endress+Hauser  
GmbH+Co. KG  
Instruments International  
Colmarer Str. 6  
79576 Weil am Rhein  
Deutschland

Tel. +49 76 21 9 75 02  
Fax +49 76 21 9 75 34 5  
[www.endress.com](http://www.endress.com)  
[info@ii.endress.com](mailto:info@ii.endress.com)

**Endress+Hauser**   
People for Process Automation