



Level



Pressure



Flow



Temperature



Liquid  
Analysis



Registration



Systems  
Components



Services



Solutions

## Technical Information

# Fieldgate FXA320, FXA520

## Gateways / Interfaces

## Gateway for Remote Monitoring of Sensors and Actuators via Web Browsers



The optional Data Logging function allows cyclic or "event"-controlled recording of measured values and status information. History data trend tracking and analysis is thus possible.

### Your benefits

- Communication via modem, Ethernet or GSM/GPRS integrated in the device
- Uses standard Internet protocols (TCP/IP, HTTP)
- Simple configuration with web browsers without additional software
- Visualisation via Internet/Intranet in the web browser and/or WAP mobile phone
- Distributed Fieldgates can be analyzed and visualized with the "Fieldgate Viewer" software.
- Limit value monitoring with alarm signalling via e-mail or SMS
- Synchronised time stamping of all measured values
- XML data transfer allows for simple further processing of the measured data
- Data Logging for cyclic or event-controlled recording of measured values and status information in pluggable DAT module
- Linearization of any container shape
- Security thanks to hardware locking

### FXA320

- Optionally, four binary inputs with event counter function and frequency measurement
- Two 4...20 mA current inputs with integrated loop power supply
- Selectable active/passive current input (for 2-wire and 4-wire devices)
- Integrated communication resistor (250  $\Omega$ ) for configuration via Commubox

### FXA520

- Web server for remote monitoring of up to 30 measuring points
- Up to 4 measured values can be displayed per device (HART)
- Intrinsically safe version [Ex ia] IIC for applications in hazardous areas
- Remote diagnosis and remote configuration of connected HART devices via FDT/DTM technology and Endress+Hauser tools
- Applicable in 4...20 mA SIL 2 Loops (IEC 61508)

### Application

Fieldgates enable remote monitoring of connected 4...20 mA sensors/actuators, either via telephone lines (analogue), Ethernet TCP/IP or mobile communications (GSM/GPRS). The measured data is web compatible (HTTP, HTML, WML) and can, therefore, be analysed in the web browser without additional software. Multiple distributed Fieldgates can be analyzed and visualized with the network-enabled "Fieldgate Viewer" software. For remote diagnosis and remote configuration, HART sensors are suitable in conjunction with FXA520.

Their integrated time control make Fieldgates suitable for all applications in which more distant measuring points have to be sporadically analysed. Configurable monitoring of limit values with alarm signalling via e-mail or SMS make it possible to react directly to changes on-site.

The supported data transfer in XML format allows for simple further analysis and processing of the measured data, through to integration into complex planning systems.


## Table of contents

<b>Applications</b> .....	<b>3</b>	<b>Certificates and approvals</b> .....	<b>23</b>
Inventory Control .....	3	CE mark .....	23
Remote maintenance of measuring equipment (FXA520 only) ....	3	Ex-approval .....	23
<b>Communication interface</b> .....	<b>4</b>	Explosion protection .....	23
Internet connection .....	4	Other standards and guidelines .....	23
Ethernet .....	4	<b>Telecommunications Regulatory Compliance</b> .....	<b>24</b>
Telephone network (analogue) .....	4	Fieldgate analogue version .....	24
Mobile communications network (GSM) .....	5	Fieldgate GSM version .....	24
GPRS support .....	5	<b>Ordering information</b> .....	<b>25</b>
<b>Function and system design</b> .....	<b>6</b>	Fieldgate FXA320 .....	25
Measuring system .....	6	Fieldgate FXA520 .....	25
Linearization .....	10	<b>Accessories</b> .....	<b>26</b>
Data Logging .....	10	Protective housing .....	26
<b>Input</b> .....	<b>11</b>	DAT module .....	26
Analogue 4...20 mA inputs .....	11	PC cable .....	26
RS-485 interface (FXA520 only) .....	11	Telephone cable .....	26
HART channel 1&2 (FXA520 only) .....	12	Fieldgate data access .....	26
Binary inputs (FXA320 only) .....	12	Fieldgate OPC server .....	27
<b>Output</b> .....	<b>12</b>	Java applets .....	27
Output signal .....	12	Antenna .....	27
Overvoltage category as per EN 61010 .....	12	HART Client (FXA520 only) .....	27
Protection class .....	12	Multiplexer (FXA520 only) .....	27
<b>Power supply</b> .....	<b>13</b>	E+H power supply units (FXA520 only) .....	27
Electrical connection .....	13	E+H Multidrop Connector FXN520 (FXA520 only) .....	27
Supply voltage .....	13	Solarbox (FXA320 only) .....	27
Power consumption .....	13	Fieldgate Viewer .....	28
<b>Operating conditions: Installation</b> .....	<b>14</b>	Fieldgate Solution FXA360, FXA560 .....	28
Installation instructions .....	14	<b>Documentation</b> .....	<b>28</b>
<b>Operating conditions: Environment</b> .....	<b>15</b>	Operating Instructions .....	28
Mounting location .....	15	Technical Information .....	28
Permitted ambient temperatures .....	15	Certificates .....	28
Climatic and mechanic application class .....	15	Accessories .....	29
Ingress protection .....	15		
Electromagnetic compatibility (EMC) .....	15		
Application in protection functions .....	15		
<b>Mechanical construction</b> .....	<b>16</b>		
Design, dimensions .....	16		
Weight .....	17		
Materials .....	17		
Terminals .....	17		
Plug-in connections .....	18		
<b>Human interface</b> .....	<b>19</b>		
Display elements .....	19		
Operating elements .....	19		
Operation concept .....	20		
Fieldgate Viewer .....	21		

## Applications


### Inventory Control

By using Fieldgates to interrogate tank or silo levels remotely, suppliers of raw materials can provide their regular customers with information about the current supplies at any time and, for example, account for them in their own production planning. For their part, the Fieldgates monitor the configured level limits and, if required, automatically activate the next supply. The spectrum of options here ranges from a simple purchasing requisition via e-mail through to fully automatic order administration by coupling XML data into the planning systems on both sides.

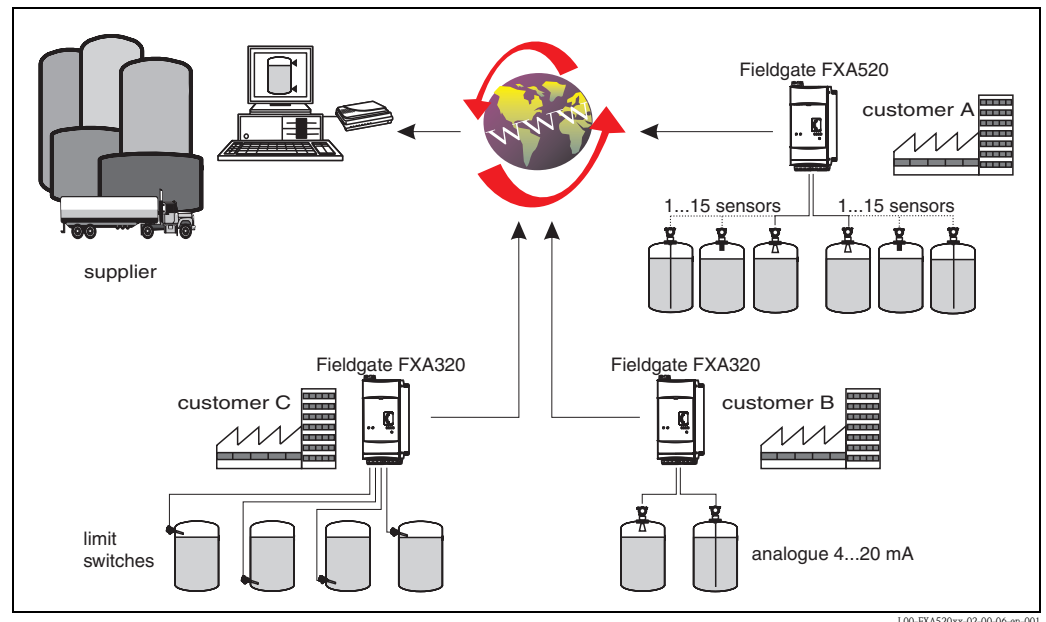

### Remote maintenance of measuring equipment (FXA520 only)

Fieldgates not only transfer the current measured values, they also alert the responsible standby personnel, if required, via e-mail or SMS. In the event of an alarm or also when performing routine checks, service technicians can diagnose and configure connected HART devices remotely. All that is required for this is the corresponding HART operating software (e.g. ToF Tool - FieldTool Package, ReadWin, ...) for the connected device. Fieldgate passes on the information transparently, so that all options for the respective operating software are available remotely. Some on-site service operations can be avoided by using remote diagnosis and remote configuration and all others can at least be better planned and prepared.

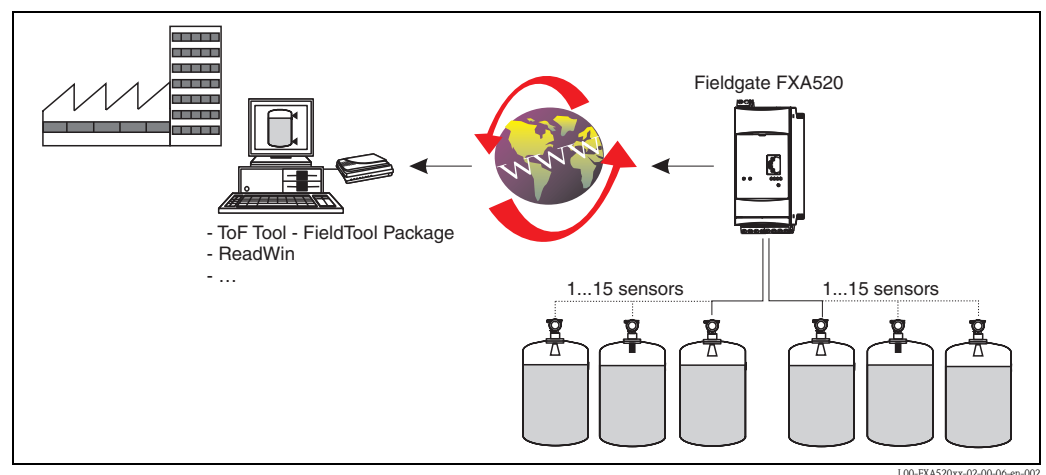


## Communication interface

### Internet connection

If the Fieldgate dials into the Internet permanently via an Internet Service Provider, it is also possible for several users to access the Fieldgate simultaneously when using an analogue/GSM version. The other advantage is that the respective user does not require a modem as a receiver at the work place.

### Ethernet


The 10 Base T Ethernet interface with RJ45 plug-in connection can be connected to the local network using a hub or switch. A standard network cable is used for this. In Ethernet operation, you always have access to the Fieldgate with a standard web browser, since the device is constantly available in the network. Several PCs can access the Fieldgate simultaneously.

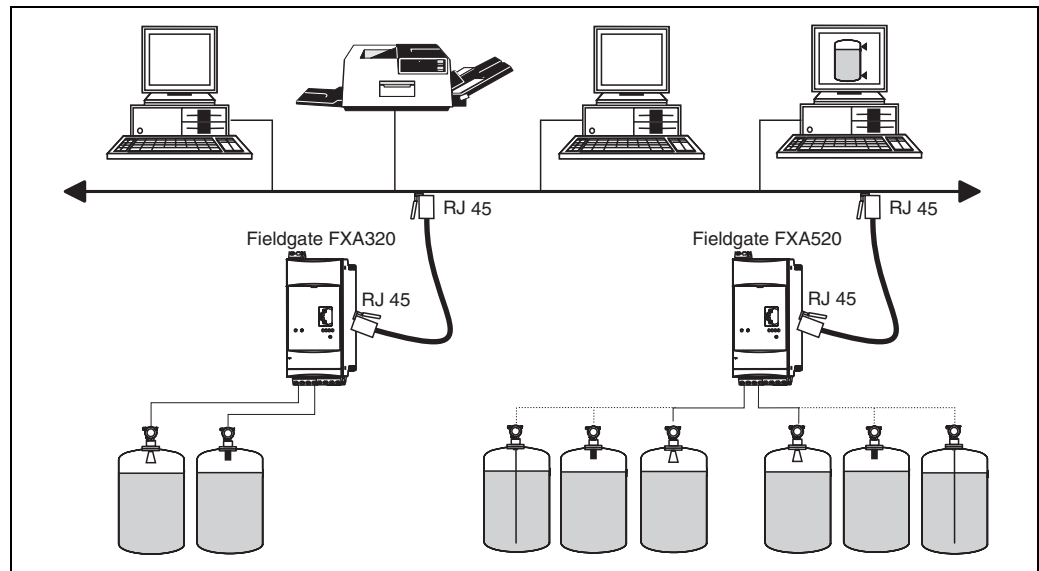

L00-FXA520ex-02-00-06-en-003

### Telephone network (analogue)

The Fieldgate is connected to the available telephone network via an RJ11 (PSTN) plug connector. This form of communication is always a point-to-point connection and only one PC can communicate with the device at any one time. In this configuration, the Fieldgate has to be selected before each access, so that it is ready for online operation. For example, the Windows internal telecommunications network can be used for dialling. After this, the Fieldgate can be accessed with a standard web browser (e.g. Internet Provider). The Fieldgate is also capable of dialling itself into a central server, in order to deliver periodic measured values for example. Here, it is also possible to transfer the measured values via the Internet using an Internet Service Provider.

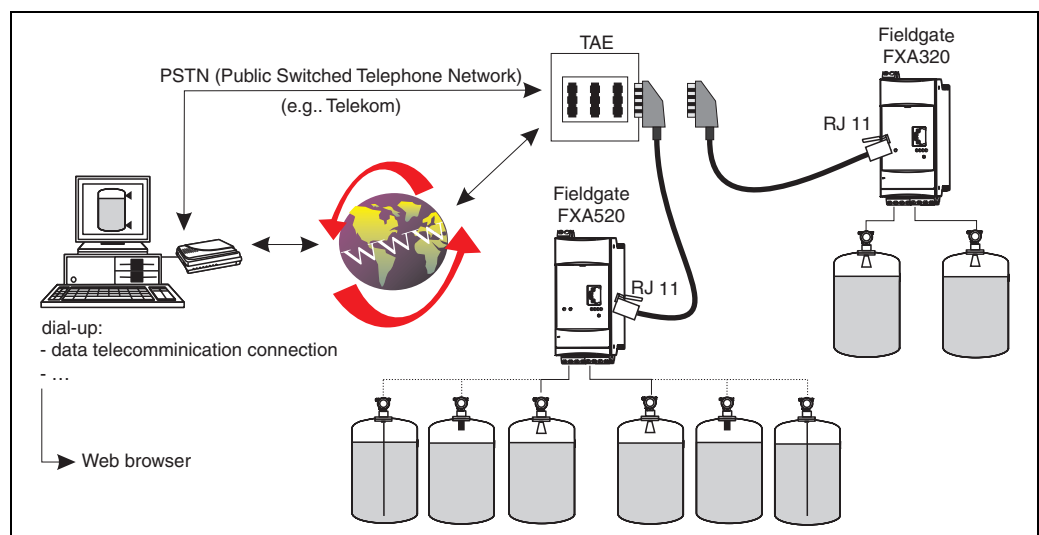


L00-FXA520ex-02-00-06-en-004

### Mobile communications network (GSM)

If there is no Ethernet or telephone network available in the Fieldgate's operating location, the data can also be transferred via GSM using the mobile communications network.

These communications versions can be configured as point-to-point connections or as freely accessible via the Internet/Intranet. A SIM card from a mobile communications network operator is required for GSM operation. Communication takes place via the data channel of the SIM card, which may require additional activation, depending on the GSM provider.

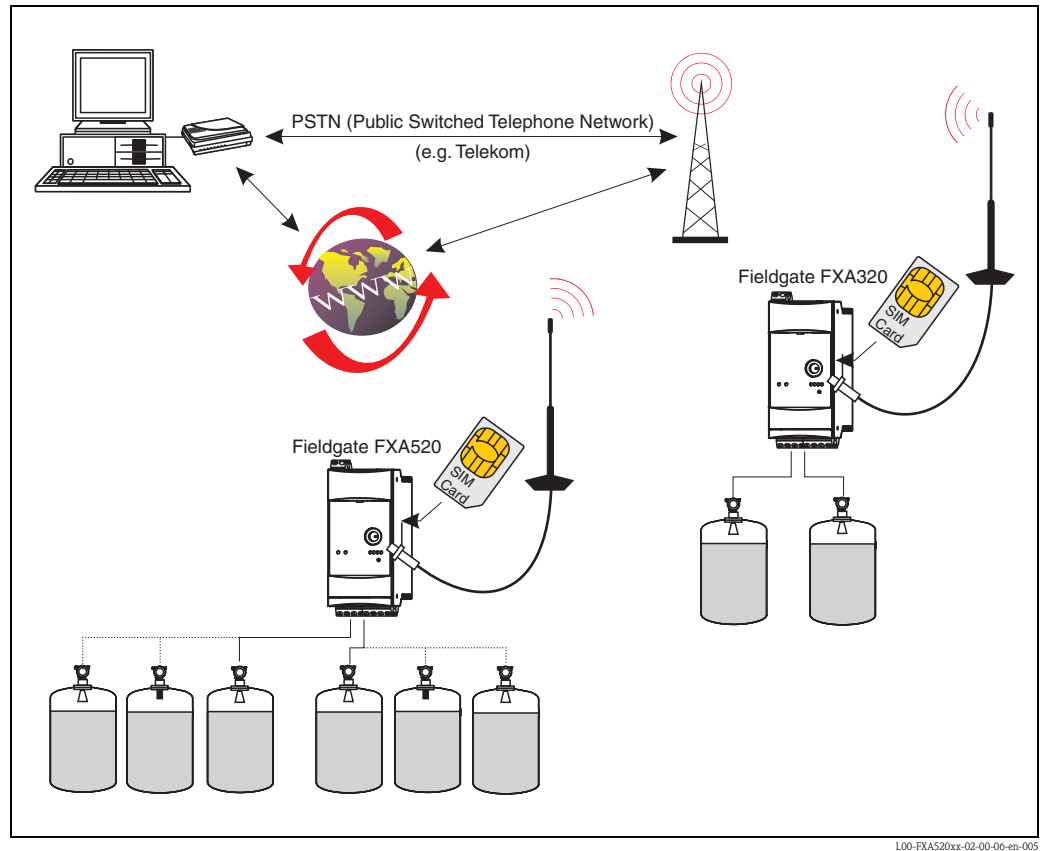

L00-FXA520xx-02-00-06-en-005

### GPRS support

GPRS (General Packet Radio Services) is a mobile communications technique, which exploits the advantages of packet-oriented data transmission and channel bundling.

With GPRS, you are only charged for the amount of data actually transmitted (and not for connection time).

Data transmission in packets enables Fieldgate Always-on operation. The Fieldgate is thus permanently in a position to connect to the Internet, an Intranet or a mailbox, whereby data are only transferred as required if a new e-mail is sent or a new Internet page is called up.

Thanks to Always-on operation, the WAP functions of the Fieldgate can also be used easily and cost-effectively.

If a user wants to access the web pages of a Fieldgate from the Internet in GPRS Always-on operation, the GSM/GPRS provider has to assign a public IP address. Clarify with the provider in question whether the provider offers such an additional service.

The Fieldgate can be accessed directly from the local network of the mobile communications system operator without a public IP address.

Alternatively, GPRS On Demand operation is also possible in which the Fieldgate only connects to the GPRS network when needed (e.g. for sending an e-mail). No public IP address is needed for this operating mode either.


The GPRS mode of the Fieldgate GSM thus offers the easiest and most cost-effective option for connecting a measuring point temporarily or permanently to the Internet or an Intranet.

## Function and system design

### Measuring system

#### Configuration with analogue input 4...20 mA (FXA320 only)


- Two devices can be connected directly.
- Selectable active/passive current input.

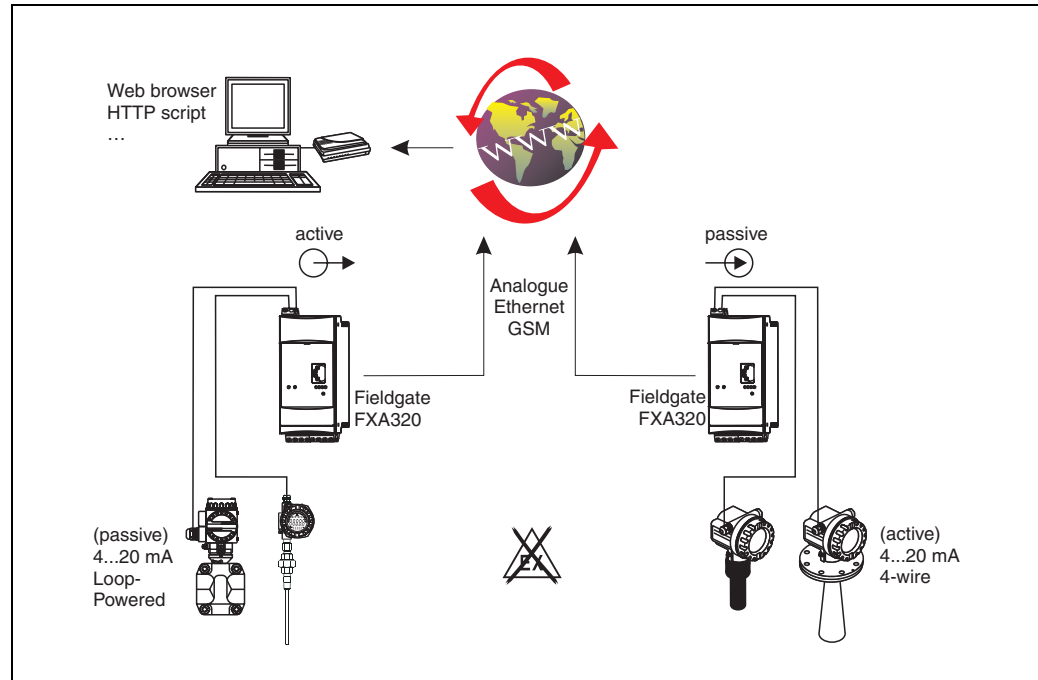

100-FXA320xx-14-00-06-en-001

#### Configuration with binary input (FXA320 only)


- Four binary inputs with event counter function and frequency measurement.
- Two 4...20 mA current inputs.

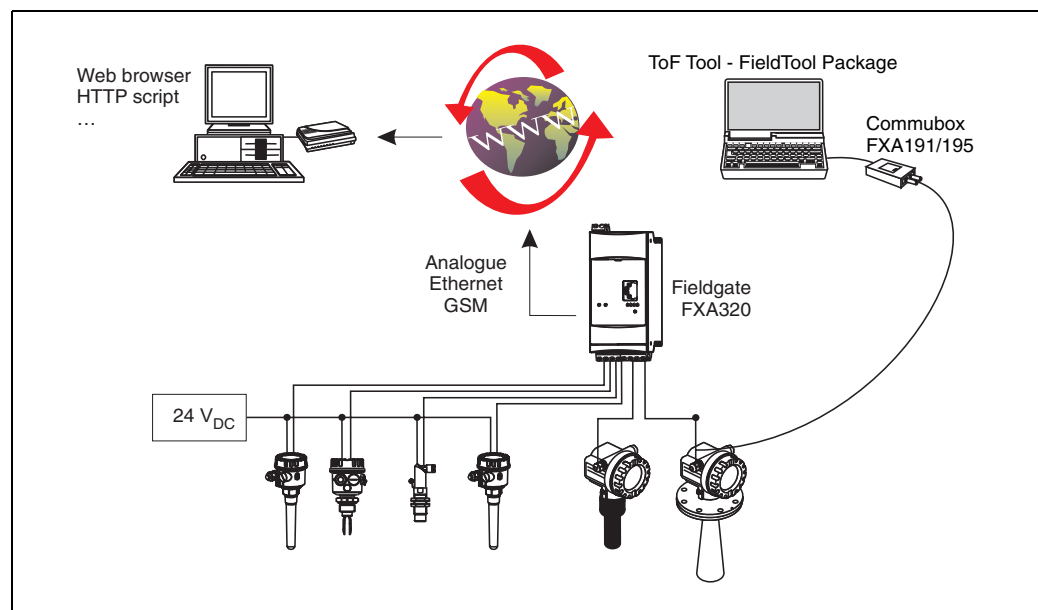

100-FXA320xx-14-00-06-en-002

**HART - Point-to-Point configuration (FXA520 only)**


- Two devices can be connected directly
- Can also be used in hazardous areas
- Qualified for 4...20 mA SIL 2 Loops (IEC 61508)
- Subsequent connection to available installation possible
- A HART communication resistor is already integrated into the device
- Additional connection of 4...20 mA sensors is also possible

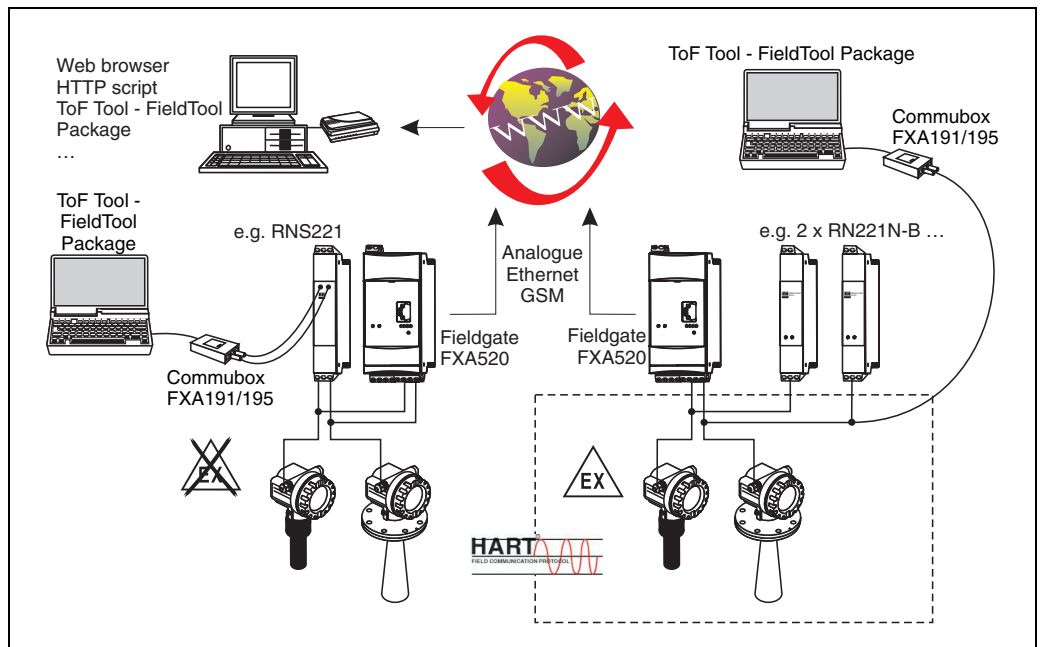

1.00-FXA520xx-14-00-06-en-007

**Configuration with analogue input 4...20 mA (FXA520 only)**

- Two devices can be connected directly
- Can also be used in hazardous areas (e.g. RN221N)
- Subsequent connection to available installation possible

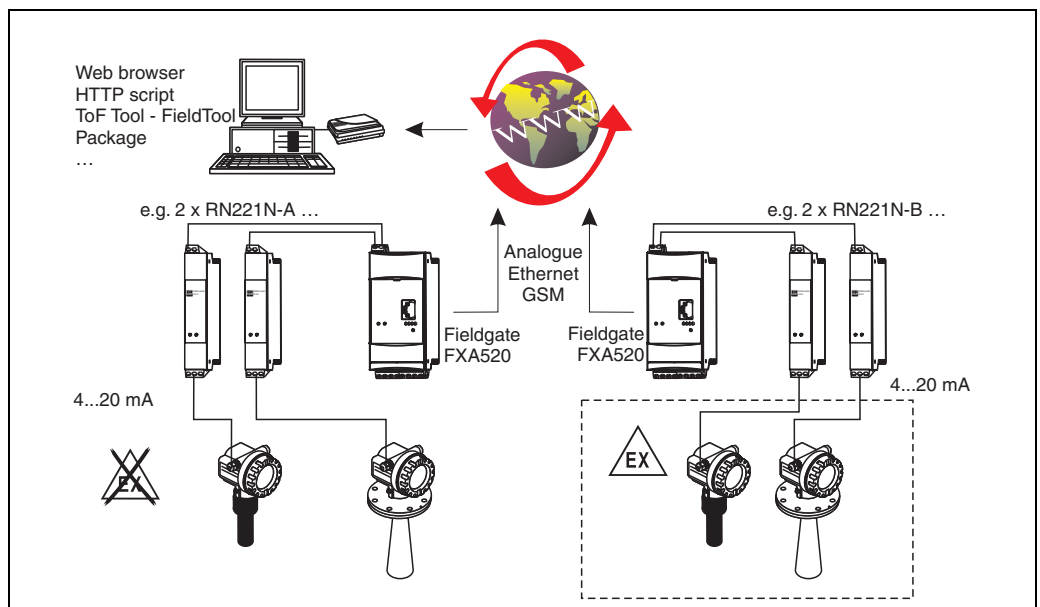


1.00-FXA520xx-14-00-06-en-006

**HART Multiplexer configuration (FXA520 only)**

- Multiplexer, e.g. KFD2-HMM-16 from Pepperl+Fuchs
- Up to 30 devices (2 x 15) can be connected
- Subsequent connection to available installation possible
- 4...20 mA still possible

**Note!**

Detailed information on the configuration can be found in the operating instructions BA268F/00.

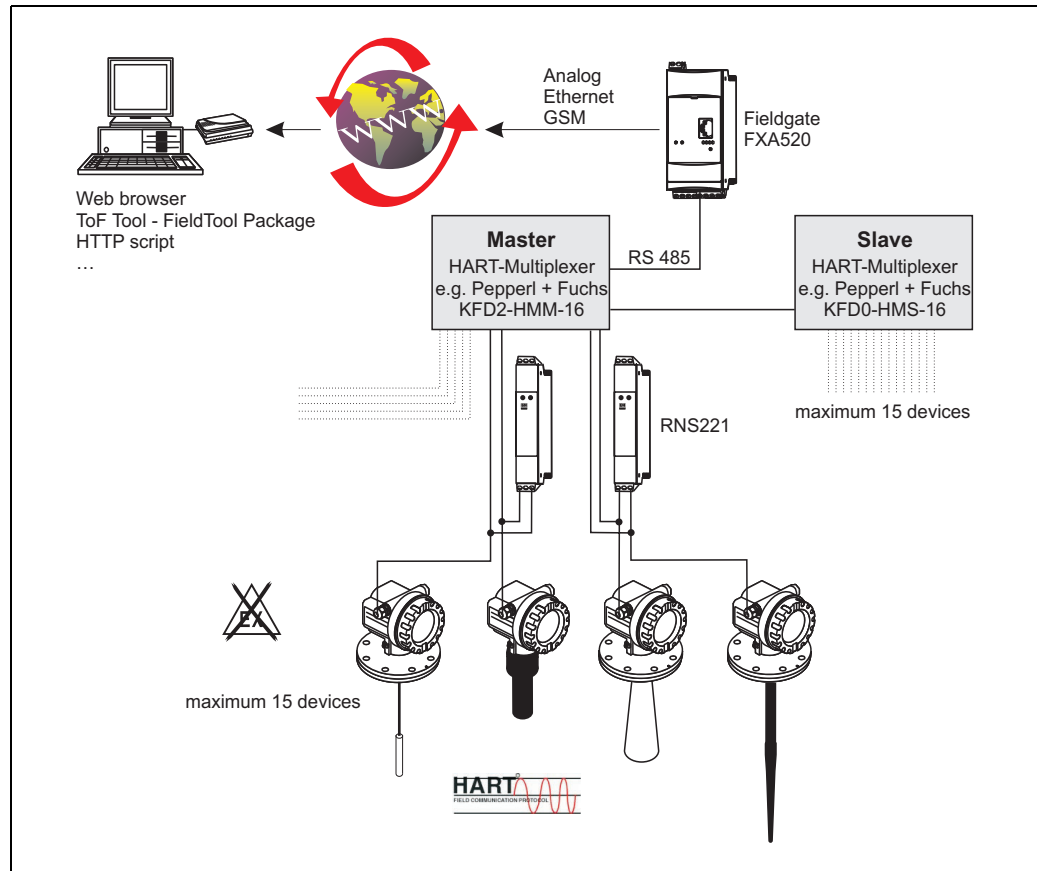


L00-FXA520xx-14-00-06-en-005



**HART - Multidrop configuration (FXA520 only)**

- Can be connected to HART transmitters.
- Up to 30 devices (2 x 15) can be connected
- When the maximum number of devices are connected, observe the following:
  - Minimum operating voltage of the connected devices,
  - Voltage drop at the communication resistor,
  - HART multidrop conformity of the connected devices,
  - Current consumption of the connected devices
  - Output characteristics of the power supply unit
  - All connected devices must first be allocated their own HART polling address
- The number of devices that can be connected can be calculated exactly using the E+H FieldNetCalc program.
- A HART communication resistor is already integrated in the device.
- The starting current of the connected devices no longer has to be taken into consideration when using FXN520.

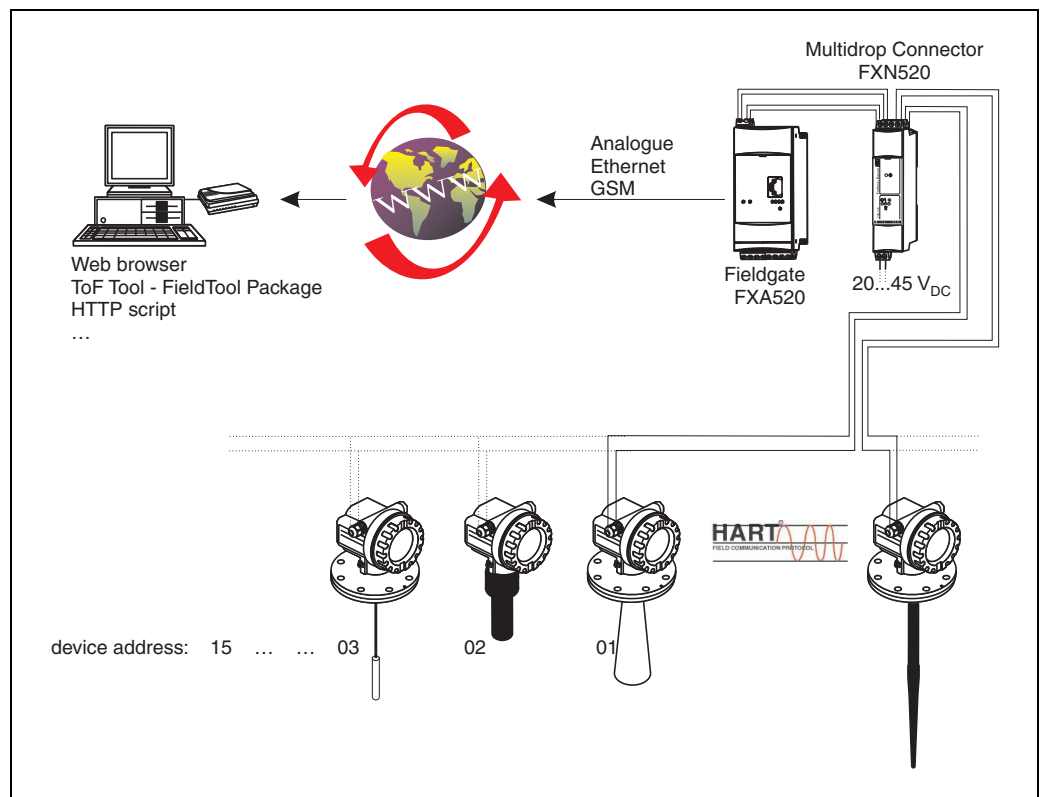

100-FXA520xx-14-00-06-en-003

**Note!**

The number of instruments which can be connected in multidrop mode can be calculated by the "FieldNetCalc" program. A description of this program can be found in Technical Information TI 400F (Multidrop Connector FXN520). The program is available from your Endress+Hauser sales organisation or in the internet at: **"www.endress.com → Download"** (Text Search = "Fieldnetcalc").

**All E+H measuring devices with the HART protocol can, therefore, be used to the full extent with the Fieldgate**


A current list of all E+H measuring devices that have the HART protocol can be found under:

- [www.hartcomm.org](http://www.hartcomm.org): "HART Products/Product Catalogue/ ...".

All Endress+Hauser measuring devices with HART protocol can be connected to the Fieldgate. Even 4...20 mA devices without HART protocol can be operated in conjunction with the Fieldgate, e.g. limit switch (Liquiphant, ...). However, then only the measured value can be read. The remote maintenance function is not given for 4...20 mA devices because the HART protocol is required for this function.

## Linearization

Thanks to linearization, measured variables with a non-linear measured value pattern can be correctly calculated and displayed.

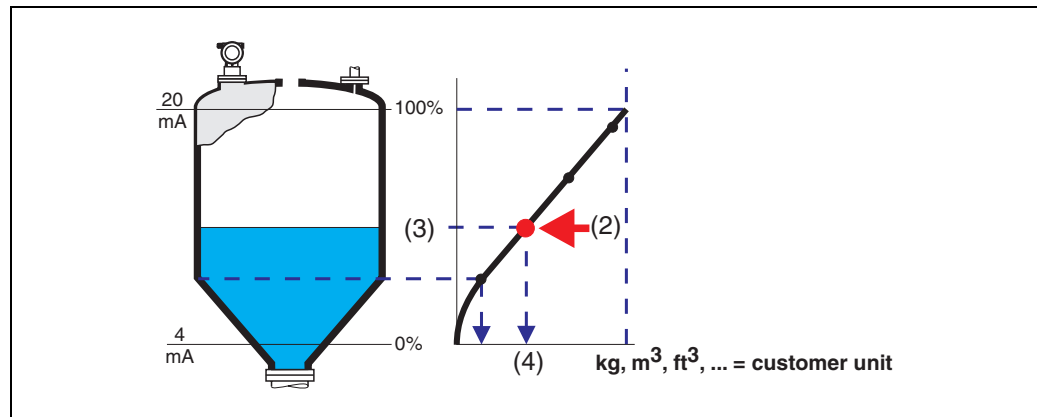

100-FXA320xx-14-00-06-en-002

In level measurement, linearization specifies the ratio between the level and tank volume or product weight and allows measurement in technical units, such as meters, hectoliters, etc. The measured value is then displayed in the selected unit.

For the internal 4-20mA analog inputs, Fieldgate allows scaling or linearization, optionally in two stages via a linearization table.

## Data Logging

The Fieldgate Data Logging function is available if a DAT module is used (as of 256K) and allows cyclic or event-controlled recording of measured values and status information.

All the available process variables of the connected devices and internal analog/digital inputs are saved with a time stamp during every save cycle. The status information is also saved.

Features of Data Logging:

- History data trend tracking and analysis possible
- Interrogation cycle can be reduced considerably by interrogating/sending the logged measured value patterns
- Cost savings by reducing interrogation/forwarding of measured values
- Increase measuring points with interrogation cycle remaining constant
- Energy saved with autonomous measuring points (solar) by transmitting saved process data less frequently
- All measured value information saved if events occur, such as limit value overshoot, and if the status changes
- History data transmitted by e-mail if events or changes in the status occur

The save cycle can be selected as required.

The total of the data records that can be saved per channel/interface depends on the device configuration and the number of connected transmitters:

- FXA320
  - 70 (with digital inputs)
  - 141 (without digital inputs)
- FXA520
  - 17 (30 HART transmitters)
  - 112 (1 HART transmitter)

Example:

With Fieldgate Viewer, a workstation cyclically reads in the data from multiple distributed Fieldgates. The measured value should be read in from every measuring point every three hours.

By using the Data Logging function, the workstation only has to retrieve the data from the Fieldgates once a week or even less frequently, for example.

If a limit value is overshoot, the values saved up to that point can be optionally e-mailed to the computer at any time.

## Input

### Analogue 4...20 mA inputs

#### FXA520

2 channels: joint ground of both channels, no galvanic isolation.

Channel 1&2 - passive	
Max. input voltage per channel	35 V
Max. input current per channel	45 mA
Input impedance	approx. 100 $\Omega$
Accuracy	$\leq 1 \%$
Voltage drop (incl. diode against reverse polarity)	$\leq 3 \text{ V}$
Connection cable	Instrument cable, unscreened
Cable resistance	max. 25 $\Omega$ per core

#### FXA320

2 channels with galvanic isolation. Can be used independently as active or passive input.

Channel 1&2 - active	
Output voltage	15 V $\pm 5\%$ / (22 mA)
No-load voltage	23.5 V $\pm 5\%$
Output current	max. 23 mA
Short-circuit current	max. 64 mA
short-circuit duration	Unlimited
Connection cable	Instrument cable, unscreened
Cable resistance	max. 25 $\Omega$ per core

Channel 1&2 - passive	
Max. input voltage per channel	35 V
Max. input current per channel	45 mA
Input impedance	254 $\Omega$
Accuracy	$\leq 0.5 \%$
Voltage drop (incl. diode against reverse polarity)	$\leq 6.4 \text{ V}$
Connection cable	Instrument cable, unscreened
Cable resistance	max. 25 $\Omega$ per core

### RS-485 interface (FXA520 only)

Galvanic isolation	500 V RMS
Termination resistor A-B	120 $\Omega$ fully integrated

**HART channel 1&2  
(FXA520 only)**

The HART signal is capacitive coupled and decoupled via a communication resistor

Communication resistor in the 4...20 mA signal line	Integrated 270 $\Omega$ communication resistor, for optional use, max. 45 mA!
Short-circuit duration (without interior communication resistor)	Unlimited

Galvanic isolation between HART channel 1 and channel 2  
Ex-isolation between field devices and internal circuits.

Output voltage U <sub>0</sub> in the event of a fault (Ex)	Max. 6.5 V
Max. current for EEx ia (Ex)	5.97 mA
Max. power output (Ex)	39 mW
Maximum input voltage (Ex)	30 V
Maximum input voltage (non-Ex)	45 V

**Binary inputs (FXA320 only)**

Galvanic isolation of all channels from the rest of the current circuits. Each 2 channels have the same reference potential.

Number of digital inputs	4
Input signal voltage	L-signal: -3 ... +5 V H-signal: +15 ... +30 V
Input current with H-signal	5 mA
Max. quiescent current with L-signal	1 mA
Measuring range of event counter function	0 ... 12.5 kHz
Measuring range of frequency measurement	4.7 Hz ( $\pm 1\%$ ) ... 12.5 kHz ( $\pm 4\%$ )

## Output

**Output signal**

- A relay for alarm in the event of a fault
- Switching-off the sensor's power supply (in the event of a fault, power-save mode)
- Switching capacity of relay contacts:
  - U~ maximum 253 V
  - I~ maximum 2 A
  - P~ maximum 500 VA at  $\cos \varphi$  0.7
  - U- maximum 40 V
  - I- maximum 2 A
  - P- maximum 80 W

**Overvoltage category as per  
EN 61010**

II

**Protection class**

II (double or reinforced insulation)

## Power supply

### Electrical connection

#### Terminal blocks

The removable terminal blocks are isolated after intrinsically safe connections (on top of device) and non-intrinsically safe connections (on bottom of device). Furthermore, the terminal blocks are also different in colour. Blue for the intrinsically safe area and grey for the non-intrinsically safe area. These distinctions allow for safe cable routing.

#### Connecting the devices

(To the upper, blue terminal blocks).

The two-core connecting wire between the Fieldgate FXA520 and HART devices can be a usual commercial instrument cable or cores in a multi-core cable for measuring purposes. If strong electromagnetic interferences have to be expected, e.g. from machines or radios, using a screened cable is recommended. Only connect the screening to the

grounding connection in the device.

The HART signal is decoupled passively without power supply.

#### Operating the device in hazardous areas (FXA520 only)

The national explosion protection directives for designing and routing the intrinsically safe signal cable must be observed. Maximum permitted values for capacity and inductivity can be found in the Safety Instructions of XA 188F.

#### Connecting the supply voltage

(Terminal 1 and 2)

For the voltage versions, see the Ordering information on page 25. A fuse is built into the power supply circuit so that a fine-wire fuse does not need to be connected in series.

The Fieldgate is equipped with reverse polarity protection.

### Supply voltage

#### Alternating current version (AC):

Voltage range: 85...253 V, 50/60 Hz.

Safe galvanic isolation between mains power supply and internal circuits.

#### Direct current version (DC):

Voltage range: 20...60 V<sub>DC</sub> or 20...30 V<sub>AC</sub>.

Reverse polarity protection guaranteed by bridge rectifier.

Safe galvanic isolation between mains power supply and internal circuits.

### Power consumption

FXA520		AC (at 253 V <sub>AC</sub> )	DC (at 20 V <sub>DC</sub> )
Analogue		6 VA	2 W
Ethernet		4.9 VA	1.5 W
GSM	Send mode	8 VA	4 W
	Standby	4.5 VA	1 W


FXA320		AC (at 253 V <sub>AC</sub> )	DC (at 20 V <sub>DC</sub> )	Solar (at 10 V <sub>DC</sub> )
Analogue		8 VA	3.5 W	—
Ethernet		8 VA	3.5 W	—
GSM	Send mode	8 VA	4.8 W	4.6 W
	Standby	6 VA	2.9 W	Sensor Powered: 2.8 W Sensor Powered Down: 0.8 W

## Operating conditions: Installation

### Installation instructions

### Mounting location


The Fieldgate must be placed in a cabinet, away from hazardous areas. There is also a protective housing (IP65) for two devices available for outdoor installation.

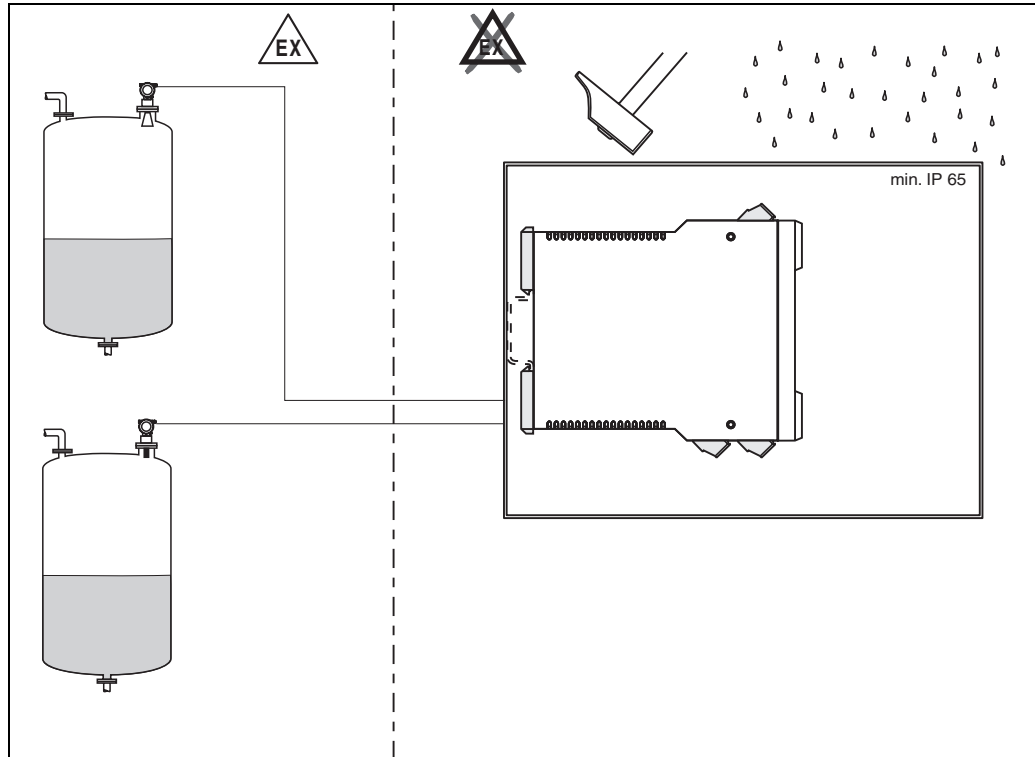

L00-FXA520ex-17-00-06-de-002

### Orientation

Vertical on DIN top-hat rail (HT 35 as per EN 60715).

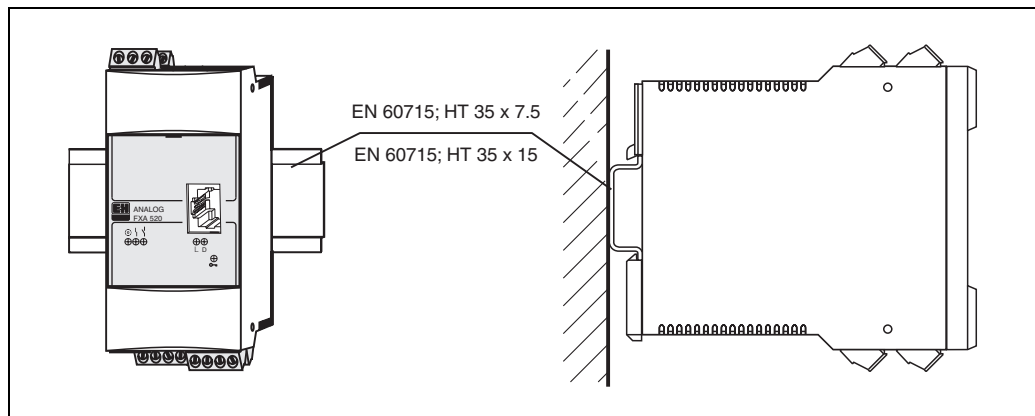

L00-FXA520ex-17-00-06-de-001

## Operating conditions: Environment

<b>Mounting location</b>	Cabinet or protective housing										
<b>Permitted ambient temperatures</b>	<p><b>For individual mounting</b></p> <p>-20 C... +60 C</p> <p><b>For series mounting without lateral spacing</b></p> <p>-20 C... +50 C</p> <p><b>Storage temperature</b></p> <p>-25 C... +85 C (preferably at +20 C)</p> <p><b>Installation in protective housing</b></p> <p>-20 C... +40 C</p> <p>Maximum two Fieldgates can be installed into a protective housing.</p> <p><b>Caution!</b></p> <p>The devices must be mounted such that they are protected from the weather and from impacts, and where possible in places that are not exposed to direct sunlight. This must be especially observed in regions with warm climates.</p>										
<b>Climatic and mechanic application class</b>	<p><b>3K3</b></p> <p>In accordance with DIN EN 60721-3-3</p> <p><b>3M2</b></p> <p>In accordance with DIN EN 60721-3-3</p>										
<b>Ingress protection</b>	IP 20, in accordance with EN 60529										
<b>Electromagnetic compatibility (EMC)</b>	Interference Emission to EN 61326, Electrical Equipment Class B.										
<b>Application in protection functions</b>	<p>The FXA 520 can be attached back effect freely to protection functions that are classified in SIL 2 to IEC 61508.</p> <table border="1"> <tr> <td><b>SFF<sup>1</sup></b></td><td>60%</td></tr> </table> <p>1) SFF = Safe Failure Fraction</p> <table border="1"> <tr> <td><b>TI<sup>1</sup></b></td><td><b>PFD<sub>avg</sub><sup>2</sup></b></td></tr> <tr> <td>1 year</td><td>1,23 x 10<sup>-6</sup></td></tr> <tr> <td>5 years</td><td>6,13 x 10<sup>-6</sup></td></tr> <tr> <td>10 years</td><td>1,23 x 10<sup>-5</sup></td></tr> </table> <p>1) TI = Test Interval between life testing of the protection function (in years)</p> <p>2) PFD<sub>avg</sub> = Probability (average) of a dangerous Failure on Demand</p>	<b>SFF<sup>1</sup></b>	60%	<b>TI<sup>1</sup></b>	<b>PFD<sub>avg</sub><sup>2</sup></b>	1 year	1,23 x 10 <sup>-6</sup>	5 years	6,13 x 10 <sup>-6</sup>	10 years	1,23 x 10 <sup>-5</sup>
<b>SFF<sup>1</sup></b>	60%										
<b>TI<sup>1</sup></b>	<b>PFD<sub>avg</sub><sup>2</sup></b>										
1 year	1,23 x 10 <sup>-6</sup>										
5 years	6,13 x 10 <sup>-6</sup>										
10 years	1,23 x 10 <sup>-5</sup>										


## Mechanical construction

### Design, dimensions

#### Note!


100 mm = 3.94 in

- Housing: aligned housing (top-hat rail design) made of plastic
- Installation: on top-hat rail as per EN 60715; HT 35x7.5 or EN 60715; HT 35x15
- Ingress protection as per EN 60529; IP 20

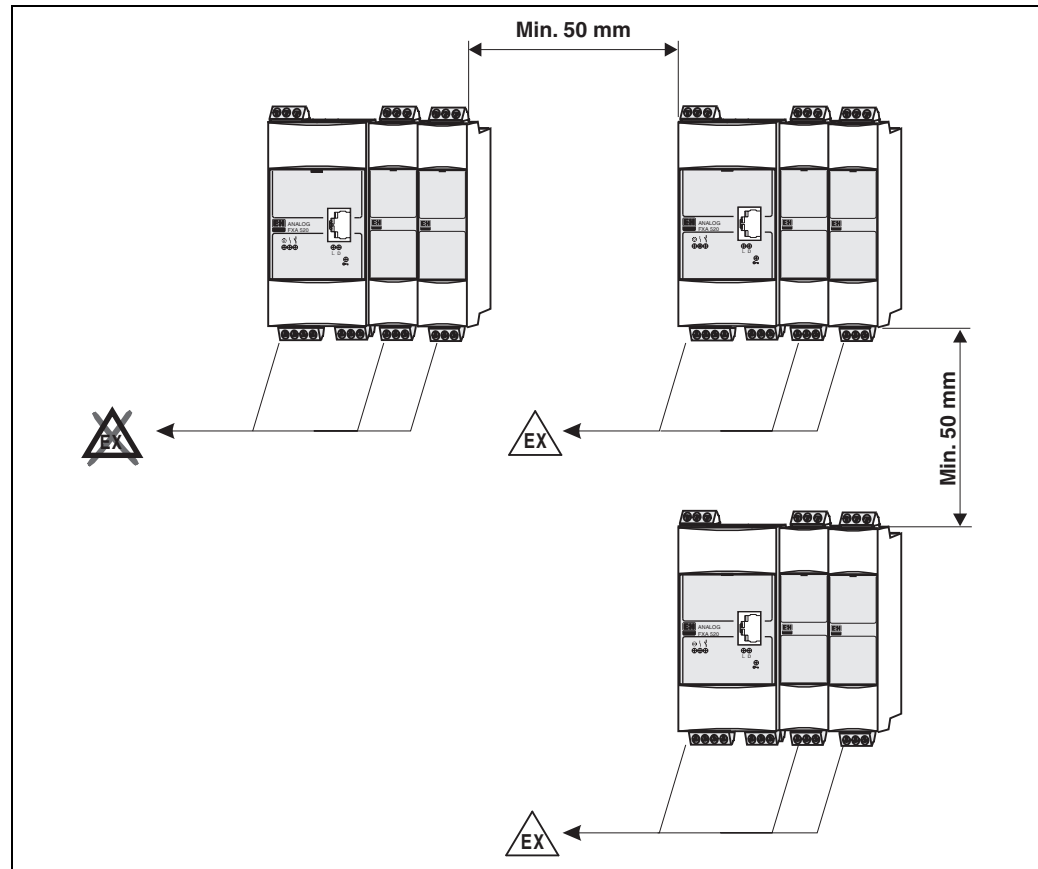

L00-FXA520xx-06-00-00-yy-002


### Dimensions

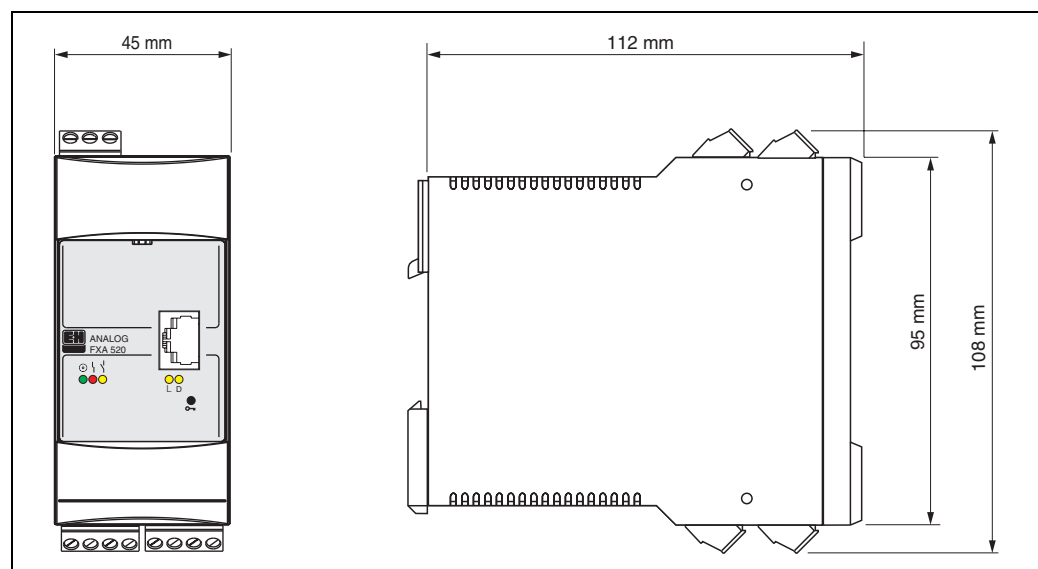

L00-FXA520xx-06-00-00-de-001




Weight	approx. 250 g
Materials	<p><b>Housing</b></p> <p>Polycarbonate Colour: light grey, RAL 7035</p> <p><b>Front cover</b></p> <p>Polyamide PA6 Colour: blue</p> <p><b>Fixing slide (for fastening on the top-hat rail)</b></p> <p>Polyamide PA6 Colour: black, RAL 9005</p>
Terminals	<p><b>Connection cross-section</b></p> <p>maximum 1 x 2.5 mm or 2 x 1.5 mm</p> <p><b>Terminal assignment Fieldgate FXA320</b></p>

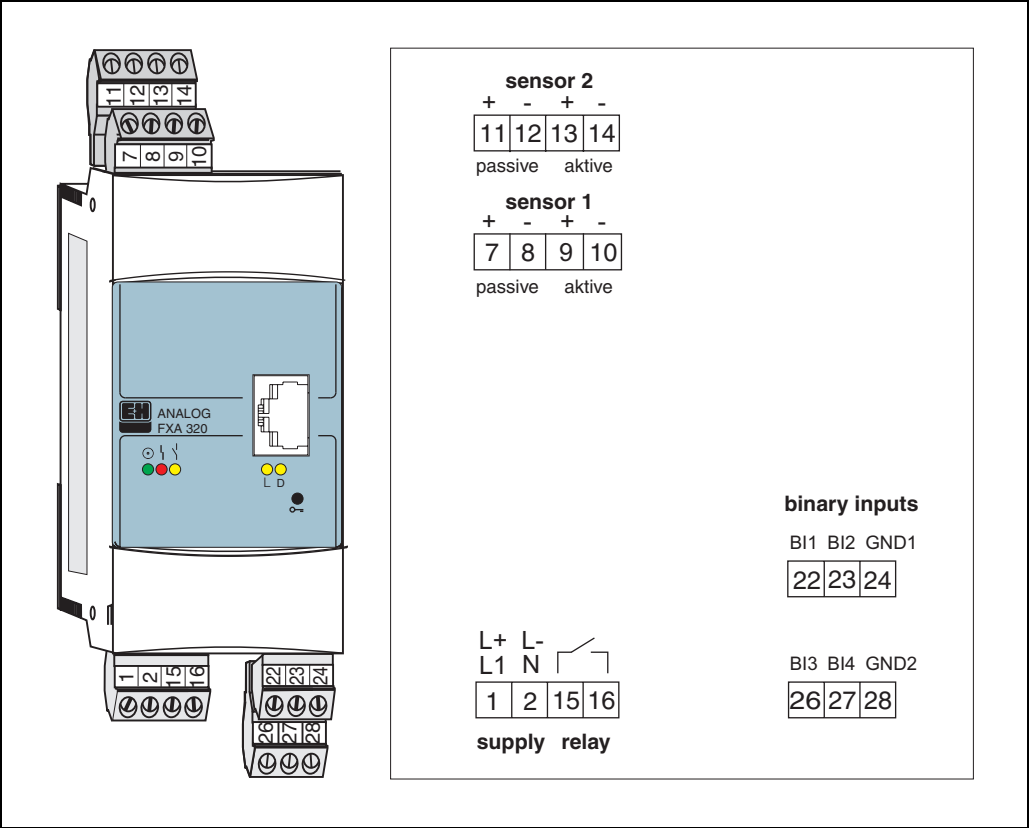

L00-FXA520xx-04-00-06-en-012

## Terminal assignment Fieldgate FXA520

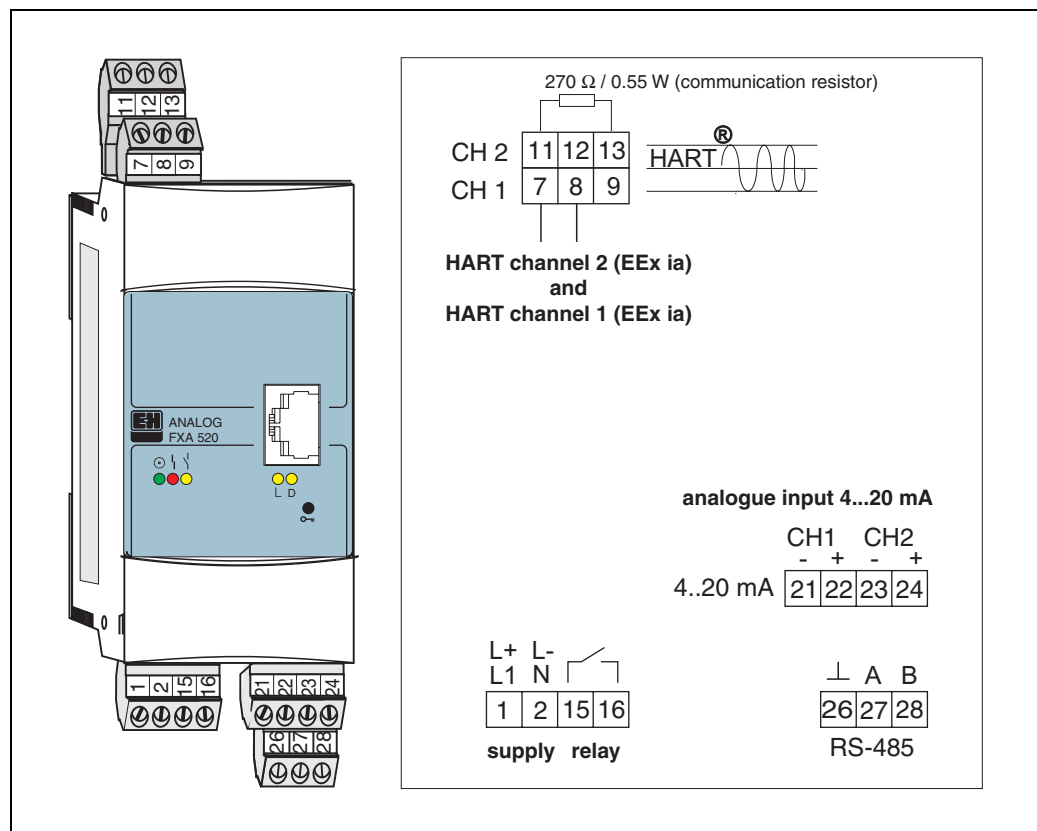

100-FXA520xx-04-00-06-en-001

## Plug-in connections

## Connection socket for Ethernet Fieldgate versions:

RJ45 socket

## Connection socket for GSM antenna:

FME socket (male)

## Connection plug for DAT module:


8-pin plug connector in 2.54 mm raster, 2 rows

## Connection plug for PC cable:

3-pin plug connector in 2.54 mm raster, 1 row

# Human interface

## Display elements

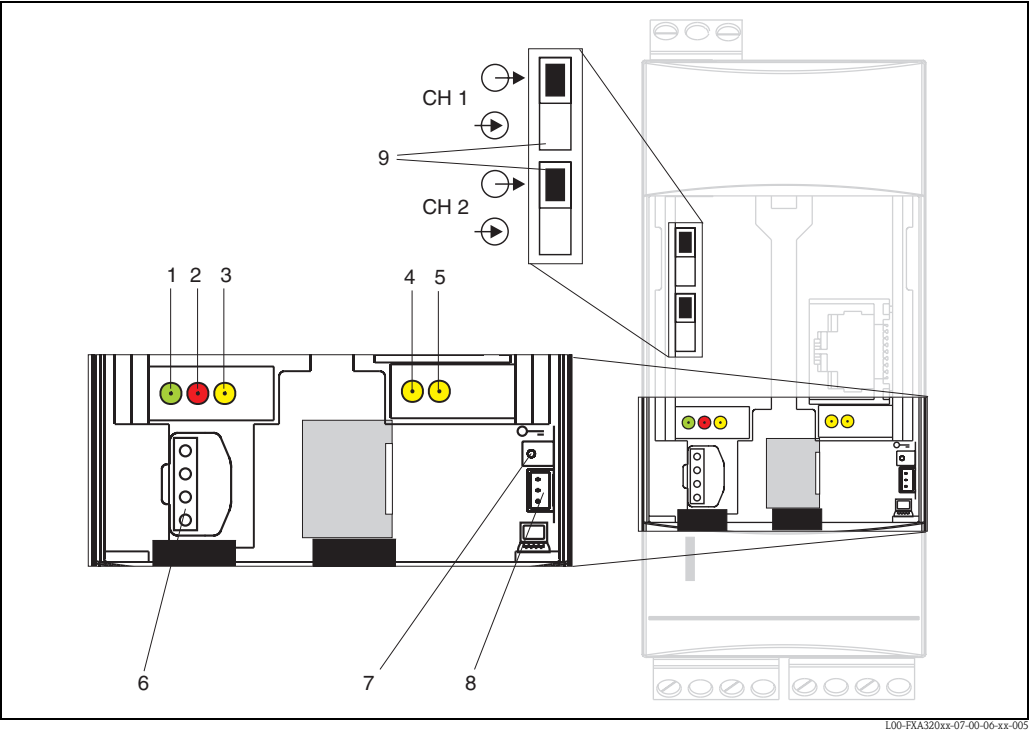

Position	Light emitting diode (LED)	Meaning
1	Green LED constant	Displays the correct power supply
2	Red LED constant	Displays a fault
	Red LED flashes	Displays a warning / On site communication via PC / Hardware is unlocked / system start
3	Yellow LED	Switching status of the built-in relay / LED on = relay tightens – LED off = relay de-energised – LED on = relay energised
4	Yellow LED	Displays a successful connection
5	Yellow LED	Displays a transfer activity / GSM version: field strength display if no connection

## Operating elements

For the arrangement of the elements, see the diagram above.

Position	Element	Meaning
6	Socket	Connection socket for DAT module
7	Button	Button for hardware security locking and configuration reset
8	Socket	Connection socket for PC cable (service connector)


### FXA320 only

Position	Element	Current input channel 1 (CH1)		Current input channel 2 (CH2)	
9	Switch position (up)		aktive		aktive
	Switch position (down)		passive		passive


## Operation concept

Fieldgate offers world-wide remote monitoring, remote diagnosis and remote configuration of Smart transmitters with the international used HART® protocol. Measured values become available world-wide via Internet and can be efficiently processed. A standard web browser is used for visualising and remote inquiry. Fieldgate displays parameters and measured values of field instruments on an HTML page. Max. 30 measured values can be displayed. Up to 4 measured values can be displayed per device.

## Fieldgate FXA520

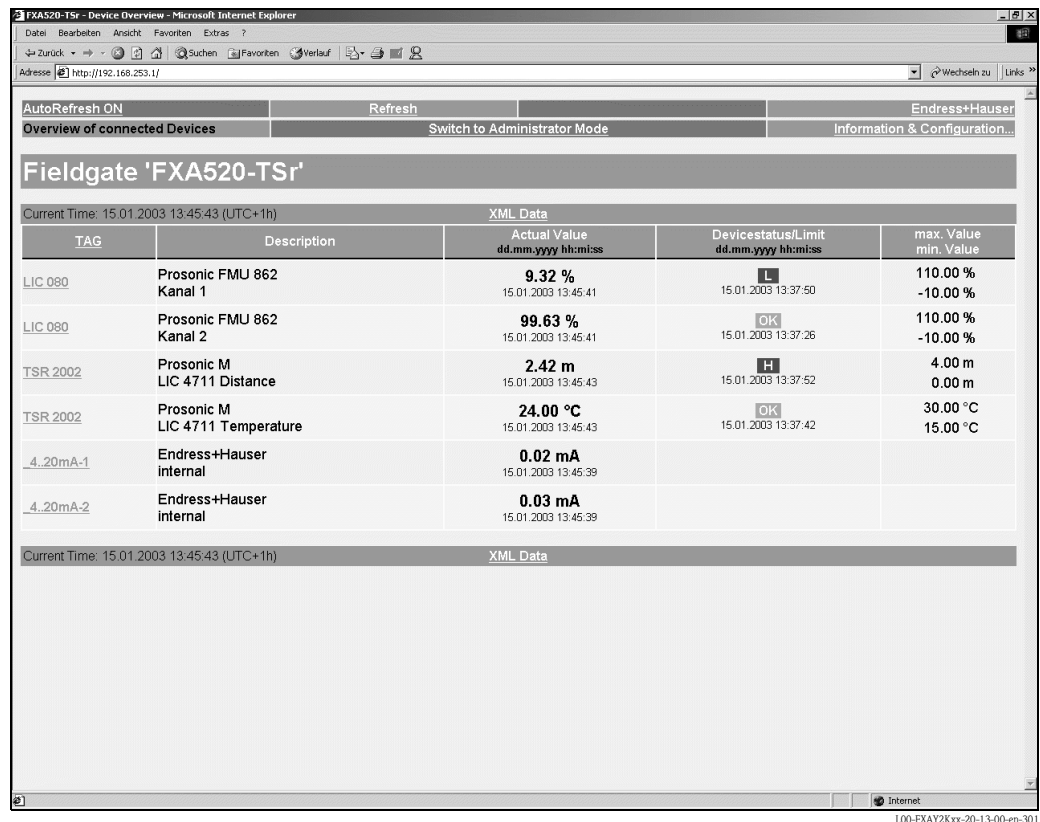

Fieldgate 'FXA520-TSr'				
Current Time: 15.01.2003 13:45:43 (UTC+1h)				
TAG	Description	Actual Value dd.mm.yyyy hh:mm:ss	Device status/Limit dd.mm.yyyy hh:mm:ss	max. Value min. Value
LIC 080	Prosonic FMU 862 Kanal 1	9.32 % 15.01.2003 13:45:41	L 15.01.2003 13:37:50	110.00 % -10.00 %
LIC 080	Prosonic FMU 862 Kanal 2	99.63 % 15.01.2003 13:45:41	OK 15.01.2003 13:37:26	110.00 % -10.00 %
TSR 2002	Prosonic M LIC 4711 Distance	2.42 m 15.01.2003 13:45:43	H 15.01.2003 13:37:52	4.00 m 0.00 m
TSR 2002	Prosonic M LIC 4711 Temperature	24.00 °C 15.01.2003 13:45:43	OK 15.01.2003 13:37:42	30.00 °C 15.00 °C
4..20mA-1	Endress+Hauser internal	0.02 mA 15.01.2003 13:45:39		
4..20mA-2	Endress+Hauser internal	0.03 mA 15.01.2003 13:45:39		

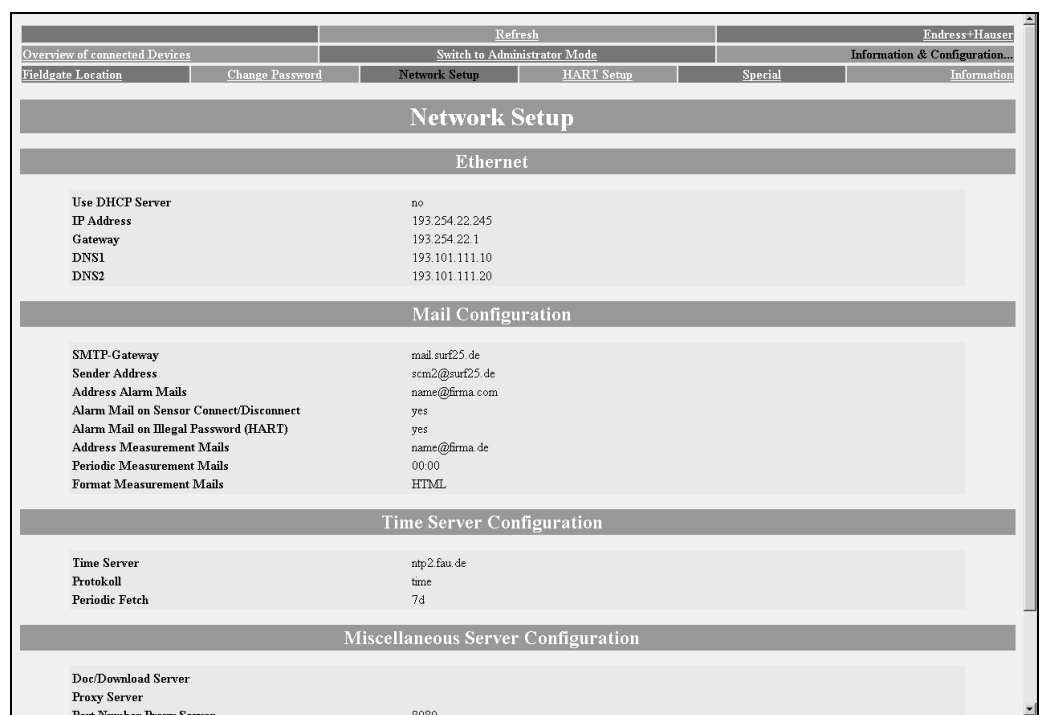

Network Setup	
Ethernet	
Use DHCP Server	no
IP Address	193.254.22.245
Gateway	193.254.22.1
DNS1	193.101.111.10
DNS2	193.101.111.20
Mail Configuration	
SMTP-Gateway	mail.surf25.de
Sender Address	scm2@surf25.de
Address Alarm Mails	name@firma.com
Alarm Mail on Sensor Connect/Disconnect	yes
Alarm Mail on Illegal Password (HART)	yes
Address Measurement Mails	name@firma.de
Periodic Measurement Mails	00:00
Format Measurement Mails	HTML
Time Server Configuration	
Time Server	ntp2.fau.de
Protokoll	time
Periodic Fetch	7d
Miscellaneous Server Configuration	
Doc/Download Server	
Proxy Server	
Post-Notification Server	2000

## Fieldgate FXA320

Tag	Description	Actual Value dd.mm.yyyy hh:mm:ss	Device status/Limit dd.mm.yyyy hh:mm:ss	max. Value min. Value
Binary-1	Schalteingang 1 Binary Input	uncovered 0.000 21.10.2003 05:51:28	OK 20.10.2003 10:31:44	
Binary-2	Schalteingang 2 Binary Input	on 0.000 21.10.2003 05:51:28	OK 20.10.2003 10:31:44	
Binary-3	Schalteingang 3 Binary Input	full 0.000 21.10.2003 05:51:28	OK 20.10.2003 10:31:44	
Binary-4	Schalteingang 4 Binary Input	good 0.000 21.10.2003 05:51:28	OK 20.10.2003 10:31:44	
Levelflex FMP40	Stromeingang Kanal 1	4.960 mA 21.10.2003 05:51:28	L 20.10.2003 11:43:59	100.000 mA 0.000 mA
MulticapT DC11TEN	Stromeingang Kanal 2	3.878 mA 21.10.2003 05:51:28	LL 20.10.2003 10:31:44	

Current Time: 21.10.2003 05:51:29 (UTC+2h)

XML Data

## Fieldgate Viewer


Fieldgate Viewer gathers, saves and visualizes data from various Fieldgates distributed across a certain area. The data are gathered automatically by a Data Access Scheduler and stored in an SQL history database. Measured values from different locations can be merged and displayed with a web browser in tabular form, in the form of bar graphs or as line-based graphics.

Fieldgate Viewer offers the following functionalities:


- Measured values displayed by groups and users
- Measured value pattern display
- Measured data export
- Measured data integration

Thanks to the fact that Fieldgate Viewer is network-enabled, the measured values displayed are available in the entire company via the internal company network. Every user with access authorization can view and visualize the data with a conventional web browser. No individual user licences are required. Optionally, the visualization can be made available worldwide via the Internet. The Fieldgate portal software creates a secure VPN (virtual private network) connection through the Internet firewall of the company, thereby facilitating secure access to the information of the Fieldgate Viewer from the Internet.

## System overview

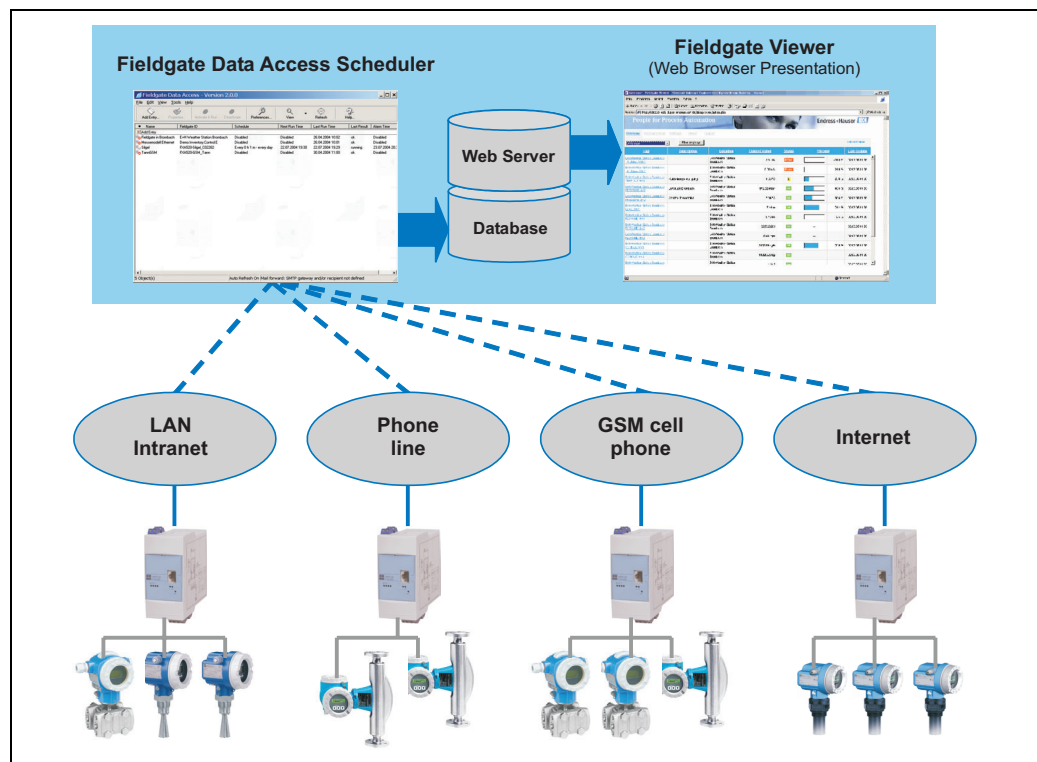

## Graphic display of the measured value pattern in Fieldgate Viewer

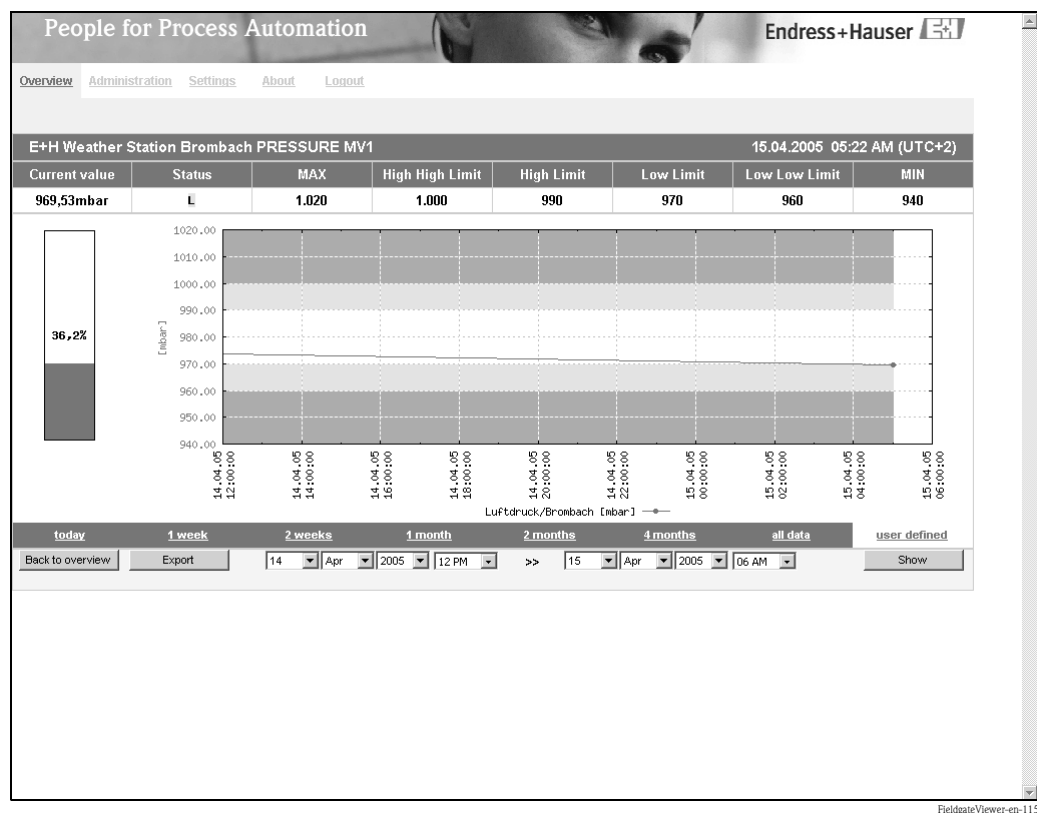

## Certificates and approvals

### CE mark

The Fieldgate meets the legal requirements of the EC directives.  
Endress+Hauser confirms that the device has been successfully tested by applying the CE label.

### Ex-approval

#### FXA520

see Ordering information

### Explosion protection

#### FXA520

[EEx ia] IIC  
Intrinsically safe circuits

Values for each circuit:

Voltage  $U_o = 6.5 V_{DC}$

Current  $I_o = 6 \text{ mA}$

Power  $P_o = 9.8 \text{ mW}$

Max. external values in accordance with the following table:

Group	Capacitance $C_o$ [ $\mu\text{F}$ ]	Inductance $L_o$ [mH]
IIC	25	1000
IIB	570	1000

If inductances and capacitances are concentrated the following values apply:

Group	Capacitance $C_o$ [ $\mu\text{F}$ ]	Inductance $L_o$ [mH]
IIC	2	0.5
	2	1
	1.5	5
IIB	10	1
	10	2
	7	5

### Other standards and guidelines

Other standards and guidelines that have been observed when designing and developing the Fieldgate.

#### EN 60529

Ingress protections for housing (IP code)

#### EN 61010

Safety requirements for electrical equipment for measurement, control and laboratory use

#### EN 61326

Interference emission (class B operating equipment), interference immunity (appendix A - industrial sector)

## Telecommunications Regulatory Compliance

### Fieldgate analogue version

#### North America

FCC CFR 47, part 15 and part 68

#### Europe

Telecoms Terminal Equipment Directive (98/13/EG)  
European approval TBR 21

### Fieldgate GSM version

#### North America

- FCC CFR 47 Part 15 and Part 24
- PTCRB provider approval

### Federal Communications Commission Notice

This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

To ensure that the unit complies with current FCC regulations and safety requirements limiting both maximum RF output power and human exposure to radio frequency radiation, use an antenna with a maximum gain of 2dBi and a separation distance of at least 20 cm must be maintained between the unit's antenna and the body of the user and any nearby persons at all times and in all applications and uses.

### Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Endress+Hauser may void the user's authority to operate the equipment.

### Federal Communications Commission Statement

#### FCC-ID: LCG-FG-FXA52X-32X

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### Wireless Notices

In some situations or environments, the use of wireless devices may be restricted. Such restrictions may apply aboard airplanes, in vehicles, in hospitals, near explosives, in hazardous locations, etc. If you are uncertain of the policy that applies to the use of this device, please ask for authorization to use it prior to turning it on.



## 25

## Fieldgate FXA520

10	<b>Certificates</b>			
	A	Version for non-hazardous areas		
	F	CSA, general purpose		
	Y	Special version		
20	<b>Power supply</b>			
	A	Power supply 85...253 V <sub>AC</sub> , 50/60 Hz		
	E	Power supply 20...60 V <sub>DC</sub> , 20...30 V <sub>AC</sub>		
	G	Solar panel connection 10...20 V <sub>DC</sub>		
	Y	Special version		
30	<b>Modem interface</b>			
	1	Ethernet - 10 Base T		
	2	Analogue modem		
	4	GSM modem without antenna		
	9	Special version		
40	<b>DAT module</b>			
	A	without DAT module		
	B	with DAT module		
	Y	Special version		
50	<b>Input</b>			
	A	2-channel analogue (4...20 mA)		
	B	2-channel analogue (4...20 mA) + 4 binary		
<b>FXA320-</b>				
Complete product designation				

<b>10</b>	<b>Certificates</b>			
	A	Version for non-hazardous areas		
	G	ATEX II (1) GD EEx ia IIC T6		
	P	FM IS - Class I, II, III, Division 1, Group A-G		
	S	CSA IS - Class I, II, III, Division 1, Group A-G		
	Y	Special version		
<b>20</b>	<b>Power supply</b>			
	E	Power supply 20...60 V DC, 20...30 V AC		
	A	Power supply 85...253 V AC, 50/60 Hz		
	Y	Special version		
<b>30</b>	<b>Modem interface</b>			
	1	Ethernet - 10 Base T		
	2	Analogue modem		
	4	GSM modem without antenna		
	9	Special version		
<b>40</b>	<b>DAT module</b>			
	A	without DAT module		
	B	with DAT module		
	Y	Special version		
<b>FXA520-</b>				Complete product designation

### Note!

A PC cable is included in the scope of supply with FXA320/520.

## Accessories

### Note!

The following table gives an overview of possible application for the individual accessory parts with the Fieldgate FXA320 or FXA520.

Accessory	Fieldgate FXA320	Fieldgate FXA520
Protective housing	X	X
	X	X
PC cable	X	X
Telephone cable (analogue version only)	is required	is required
Fieldgate data access	X	X
Fieldgate OPC server	X	X
Java applets	X	X
Antenna (GSM version only)	is required	is required
HART Client (FXA520 only)	—	X
Multiplexer (FXA520 only)	—	X
E+H power supply units (FXA520 only)	—	X

### Protective housing

The protective housing in protection class IP 66 is equipped with an integrated top-hat rail and is closed with a transparent cover that can also be lead sealed.

#### Dimensions:

W 180 / H 182 / D 165

#### Colour:

Light grey RAL 7035.

Order number: 52010132.

### DAT module

Optionally, an external EEPROM can also be attached where configuration data, identical to the internal EEPROM, and data logging data are saved.

- This makes it possible to replace the FXA320/520 if it is defective without losing the customized configuration data.
- The integrated Data Logging memory allows cyclic or event-controlled recording of measured values and status information (256K DAT module).

Order number: 52013311.

### PC cable

A PC can be connected to the FXA320/520 for configuration purposes via a serial RS 232 connection. Order number: 52013984.

### Telephone cable

RJ11 (analogue plug, double-sided, length: 5 m). Order number: 52014031.

### Fieldgate data access

Fieldgate Data Access software assists with the collection of data from different Fieldgates. The fetching of data is controlled via entries in the Scheduler. Time control can be via periodic intervals or at user-defined times. Under Windows NT4 / 2000 / XP, collection of the data can be accomplished via a "system service", which runs in the background. The data are saved in CSV format. Further processing of the data can be carried out with, e.g. Excel.

Web server for remote monitoring of measured values.

Fieldgate Viewer gathers, saves and visualizes data from various Fieldgates distributed across a certain area. The data are gathered automatically by a Data Access Scheduler and stored in an SQL history database.

Order number: 52027963 (full version) and 52027962 (demo version).

<b>Fieldgate OPC server</b>	The Fieldgate OPC server provides an interface between one or more Endress+Hauser Fieldgate devices and all possible OPC Data Access 2.0 compatible Clients. The Fieldgate can be connected via a dial-up modem or through a TCP/IP network.
<b>Java applets</b>	Java applets for a customised view of the screen.
<b>Antenna</b>	Antenna for communication via mobile communications (GSM): <ul style="list-style-type: none"><li>■ Triband flat antenna (900/1800/1900 MHz). Order number: 52018396.</li><li>■ Dual band station antenna (900/1800 MHz). Order number: 52018395.</li></ul>
<b>HART Client (FXA520 only)</b>	The HART Client is a free add-on which is required for remote configuration via HARTtools (e.g. with ToF Tool - FieldTool Package, ReadWin, ...). You can download the current software version from the Internet from the Endress+Hauser product pages (download: <a href="http://www.endress.com">http://www.endress.com</a> ).
<b>Multiplexer (FXA520 only)</b>	Accessories for HART Multiplexer system (from Pepperl+Fuchs): <ul style="list-style-type: none"><li>■ HART Multiplexer Master KFD2-HMM-16. Order number: 52017691.</li><li>■ Master-interface connecting cable. Order number: 52017687.</li><li>■ HART Multiplexer slave KFD0-HMS-16. Order number: 52020232.</li><li>■ Master-slave connecting cable. Order number: 52020233.</li><li>■ Interface module without communication resistor. Order number: 52017689.</li><li>■ Interface module with communication resistor. Order number: 52017690.</li><li>■ Switched-mode power supply. Order number: 52017688.</li></ul>
<b>E+H power supply units (FXA520 only)</b>	<p><b>RMA422</b></p> <p>Multifunctional 1-2-channel top-hat rail device with intrinsically safe current inputs and transmitter power supply, limit value monitoring, mathematics functions and 1-2 analogue outputs.</p> <p><b>RNS221</b></p> <p>Power supply unit for supplying power to two two-wire sensors or transmitters in non-hazardous areas.</p> <p><b>RN221N</b></p> <p>Isolator with power supply for safely isolating 4...20 mA standard signal circuits.</p> <p><b>RMA421</b></p> <p>Multifunctional 1-channel top-hat rail device with universal input, transmitter power supply, limit value monitoring and analogue output.</p>
<b>E+H Multidrop Connector FXN520 (FXA520 only)</b>	Operated several devices in multi-drop operation for FXA520. Order number: 52023652.
<b>Solarbox (FXA320 only)</b>	Self-sufficient current supply unit for FXA320 with solar panel. Order number: 52023445.

**Fieldgate Viewer**

Web server for remote monitoring of measured values.

Fieldgate Viewer gathers, saves and visualizes data from various Fieldgates distributed across a certain area. The data are gathered automatically by a Data Access Scheduler and stored in an SQL history database.

Order number: 52027963 (full version) and 52027962 (demo version).

---

**Fieldgate Solution FXA360, FXA560**

Fieldgate Solution FXA360 and FXA560 are customized solutions for applications in the area of "Inventory Control", completely mounted and wired in the cabinet. The customers order and pay for exactly the type of configuration they need to provide the solution to their application.

---

## Documentation

---

**Operating Instructions****KA193F/00/a6**

Mounting and installation instructions for Fieldgate FXA520. Order number: 52013633.

**KA215F/00/a6**

Mounting and installation instructions for Fieldgate FXA320. Order number: 52020867.

**BA258F/00/en**

Operating Instructions for Fieldgate FXA520 (online help in the Internet browser).

**BA282F/00/en**

Operating Instructions for Fieldgate FXA320 (online help in the Internet browser).

**BA305F/00/en**

Operating instructions for Fieldgate Viewer (download via the Internet).

**BA273F/00/en**

Operating instructions for Fieldgate Data Access software (download via the Internet).

**BA272F/00/en**

Operating instructions for Fieldgate OPC server software (download via the Internet).

---

**Technical Information****TI403F/00/en**

Fieldgate Solution FXA360, FXA560.

**TI400F/00/en**

Multidrop Connector FXN520.

**TI391F/00/en**

Solar box for Fieldgate FXA320. Order number: 52023595.

---

**Certificates****XA188F-A/00/a3**

Safety Instructions for electrical operating equipment for hazardous areas.  
Order number: 52013636.

**ZD086F/00/en**

Control Drawings (FM). Order number: 52013634.

**ZD087F/00/en**

Control Drawings (CSA). Order number: 52013635.

---

**Accessories**

**BA265F/00/de**

Cable for the HART Multiplexer-System. Order number: 52017693.

**BA266F/00/en**

Interface Modul without Communication resistor. Order number: 52017694.

**BA267F/00/de**

Interface Modul with Communication resistor. Order number: 52017695.

**BA268F/00/en**

HART-Multiplexer Master KFD2-HMM-16. Order number: 52017696.

**BA283F/00/en**

HART Multiplexer slave KFD0-HMS-16. Order number: 52021044.

**BA269F/00/en**

Switched power supply. Order number: 52017698.

**TI391F/00/en**

Solarbox for Fieldgate FXA320. Order number: 52023595.





#### International Head Quarter

Endress+Hauser  
GmbH+Co. KG  
Instruments International  
Colmarer Str. 6  
79576 Weil am Rhein  
Deutschland

Tel. +49 76 21 9 75 02  
Fax +49 76 21 9 75 34 5  
[www.endress.com](http://www.endress.com)  
[info@ii.endress.com](mailto:info@ii.endress.com)

**Endress+Hauser**   
People for Process Automation